

#IndiaKaOnida

ONIDA



Google TV

4K MINI QLED TV



Before operating the unit,
please read this manual thoroughly.

*Product shown is for illustration purpose only Actual product may vary.

English

Contents

- Safety Warning and Notice.....
- Mounting and Connecting.....
 - Mounting the TV set.....
 - Connecting peripheral equipment.....
- Panel Control Keys.....
- Remote Control.....
- Basic Operations.....
 - Turning on/Standby.....
 - Signal source selection.....
 - Menu operation description.....
 - Channel scanning.....
- Instructions for quick start.....
 - Basic Operations.....
 - Quick Start.....
 - Smart Applications.....
 - Network Settings.....
 - Bluetooth Setting.....
- Recommendations.....
- Important Statement on Network Services.....
- Troubleshooting.....
- Technical Specifications.....
- Base Installation Instructions.....
- Use of a TV wall mounting.....

Safety Warning and Notice

Thanks for choosing the high-performance and multifunctional intelligent LED TV produced by our company. This precious thing will bring you better audiovisual enjoyment. The design of this product has given consideration to factors affecting personal safety, and the product itself has gone through strict tests prior to delivery. However, improper operation may result in electric shock and fire disaster. To ensure safety, prolong the service life of this product, and make sure the best performance of this product can be given full play to, please read the manual and marking label carefully before using it and comply with the following safety instructions. Please keep the user manual for later use.

	Warning	May result in casualties
--	----------------	--------------------------

	Indicate the behaviors that must be prohibited
---	--

 
	Attention	May result in personal injury or property losses
--	------------------	--

	Indicate the operations that must be performed
---	--

Under Following Conditions

- Power failure or unstable voltage.
- Abnormal sound or smell from the device.
- AC power cord is damaged.
- TV set is damaged due to falling off, knock or impact.
- Any liquid or foreign matters enter into the TV set.

Turn off the TV set immediately, unplug the power cord from the power outlet, and contact authorized maintenance personnel.



- If coal gas or other flammable gases leak, do not unplug the power cord of the TV set or other electric appliances; instead, close the valve of the gas immediately and open the doors and windows.

! Warning

- Only use 10A-240VAC, 50/60Hz power supply. 
- All cables can be connected or pull out only after power supply is turned off.
- Do not fix the TV set on instable position, or else it may cause falling off, damage, or even fire.
- Do not put the TV set in the environment:
 1. With direct sunshine, moisture, overheating, undercooling or heavy dust;
 2. With flammable or explosive substance;
 3. With flammable or corrosive gas;
 4. In bathroom, kitchen, etc.
- Do not use damaged or improper power socket, and ensure that the plug and socket are connected properly.
- Keep the power plug and socket free of dust and metal pieces.
- Do not damage the power cord:
 1. It is prohibited to refit the power cord;
 2. Do not put heavy object on the power cord;
 3. Keep the power cord away from heat source;
 4. Do not drag the power cord when unplugging.
- Do not connect too many appliances to one power strip, or else it may cause fire due to high power consumption.
- Do not let open flame (e.g. lit candle) approach the TV set, or else it may cause electric shock or fire.
- Do not put the container filled with water on the TV set, to avoid electric shock or fire caused by water drop of splashing.
- Do not penetrate any sharp object, metal or liquid into the signal connector or air vents, to avoid short circuit and product damage as well as electric shock.
- The slots on the case is designed to release heat so as to assure that all inside components will not reach an extra high temperature and can work normally for a long time. Please do not cover the holes while place it.

Safety Warning and Notice

Warning

-  Do not touch the plug with wet hands, or else it may cause electric shock.
-  Do not turn on the TV set in thunderstorm weather; instead, unplug the power plug and antenna connector to avoid lightning strike.
-  Do not disassemble the TV set by yourself, or else it may cause electric shock or fire. Contact qualified personnel for maintenance.

Attention

- Do not let children climb onto the TV set.
- Keep the small accessories away from children's reach to avoid swallowing.
- If the TV set won't be used for a long time, please turn off the device and unplug the power cord.
- Before cleaning the TV set, unplug the power cord and wipe with soft cloth; do not use chemical reagents and avoid foreign substances entering into the device. The incorrect cleaning (such as cleaning fluid, water, etc) may lead to damage of product's appearance, erasing products printing information, even flow into the machine and damage components, cause machine can not display.
- To adjust the position or angle of the TV set, please disconnect all wires and move slowly to avoid falling off.
- Do not rub with hard object, knock at, bend or squeeze the screen.
- Do not use machine immediately after transferring machine to the places with high temperature from low temperature, which will cause fogging inside machine and failures.
- If the screen is broken and the liquid splashes on skin, please wash with clean water immediately for 15 minutes, and go to see your doctor.
- To carry the TV set with hands, please grasp the corners and hold the bottom; do not apply force on the panel.

Attention

- Displaying the same image for a long time or active image with fixed words, icons will leave "image persistence" on screen which will not disappear after powering off for a long time. This undesirable phenomenon is not covered by warranty.
- Healthy TV watching:
 1. Watch in appropriate light; poor light or long time watching may hurt your eyes.
 2. Adjust the volume appropriate to avoid hurting your hearing.
- Unplug the power cord of the device to cut off the power supply.
- If a power plug or appliance coupler is used as disconnecting device, it should ensure easy operation.
- Power plug shall be connected reliably. Loose power plugs may cause sparkle and fire.
- All the technical specifications in the user's manual and on the packaging are subject to changes without prior notice. If there is slight deviation between the user's manual and actual operation, the latter shall prevail.

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, YouTube Music, Chromecast built-in and other marks are trademarks of Google LLC.

Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

HDMITM
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

 
Mounting and Connecting

Mounting the TV set


Tips on Installation

- The TV set should be mounted near the AC power socket for easy plugging and unplugging.
- For your safety, please select appropriate wall mount bracket or base.
- To avoid hurt, it is required to place the TV set on stable plane, or fix on firm wall.
- Ask qualified personnel to mount the TV set on the wall. Improper mounting may result in instable TV set.
- Do not place the TV set at any place susceptible to mechanical vibration.
- Do not place the TV set at any place that insects may enter.
- Do not mount the TV set against air conditioner, or else the internal panel of the display may condense moisture and cause failure.
- Do not place the TV set at any place with strong magnetic field, or else it may be interfered with and damaged by electromagnetic wave.

Mount on the base

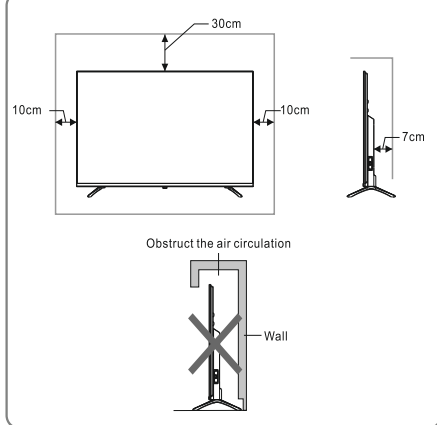

Mount on the wall

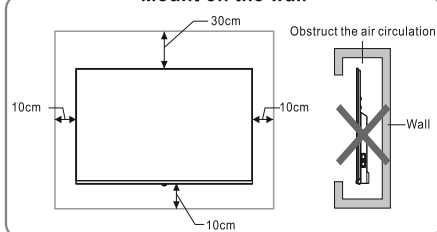 

Ventilation

- Please keep this space at least around the TV, as shown in the figure.
- Do not cover the air vents or insert any object into the enclosure.
- Do not put the device in limited space, e.g. bookcase or embedded closet, unless the TV set is properly ventilated.

Warning

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

 
Connecting peripheral equipment

Remark:

1. When you need to connect the device which support the eARC function, please select the HDMI 1 interface.
2. HDMI connector can realize DVI connector function with external HDMI/DVI commutator.

Mounting and Connecting


3. The peripheral equipment and cables described in this manual should be purchased separately.

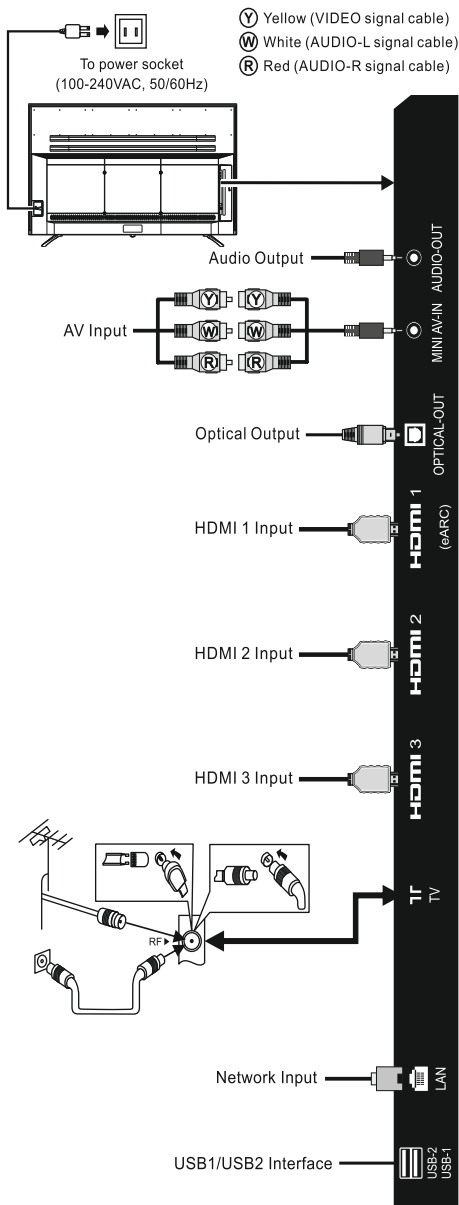

Warning

When connecting outdoor antenna to signal port of the TV set, please turn off the main power switch of the TV set first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this TV set must be isolated from the protective grounding, or else it will cause fire or other hazards.

 
Panel Control Keys

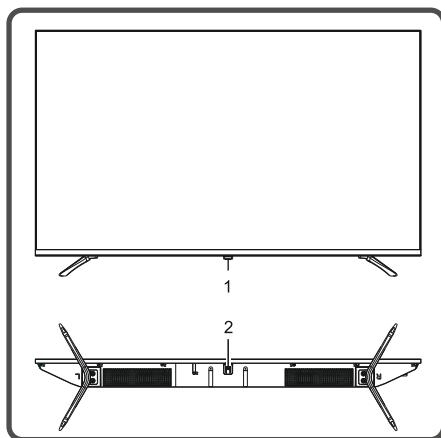

1. Power LED indicator and remote receiving window.
2. ⏻ Standby: To switch the TV on or back to standby.

Remark:

 
- ①. The appearance varies depending on the model, and the actual product shall prevail.
- ②. Please use the remote control for more operation.

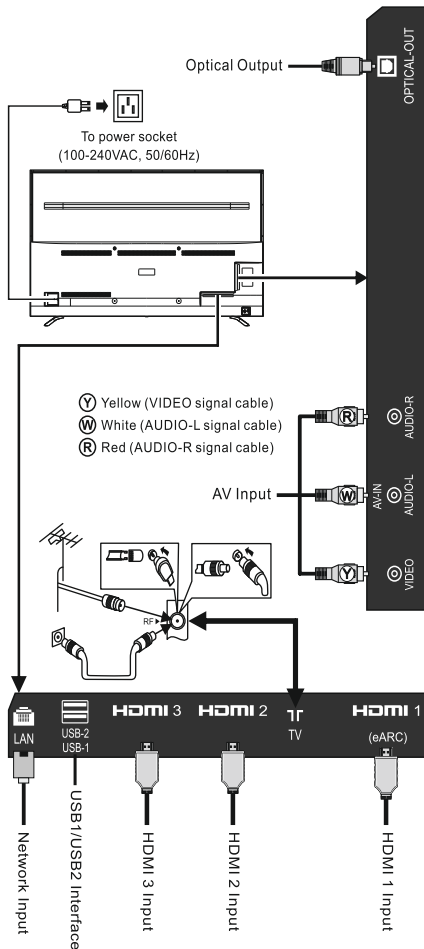

Warning

When connecting outdoor antenna to signal port of the TV set, please turn off the main power switch of the TV set first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this TV set must be isolated from the protective grounding, or else it will cause fire or other hazards.

 Panel Control Keys

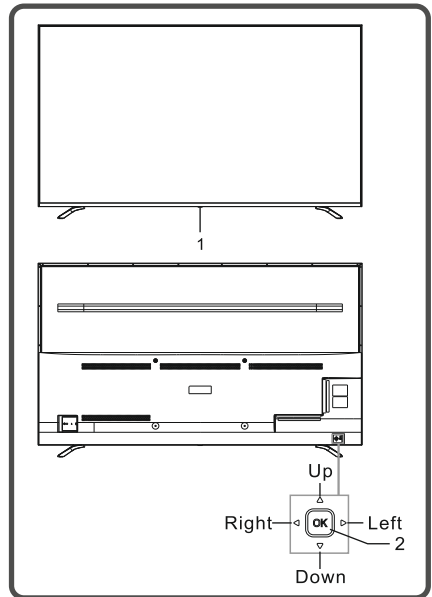

1. Power LED indicator and remote receiving window.

2. **OK** rocker:

Power on or switch to standby mode with **OK** rocker:

- ①. After plugging power cord into the electrical socket, you can press **OK** rocker to turn on the TV.
- ②. In power on state, long press **OK** rocker to switch to standby mode.

After turning on the TV, Press **OK** rocker:

- ①. In non-OSD menu, press **OK** rocker to display the menu.
- ②. In OSD menu and smart mode, press **OK** rocker to confirm the operation.

Move rocker **Up/Down/Left/Right**:

 
- ①. In TV mode, move rocker **Up/Down** to select the channel.
- ②. In smart mode, move rocker **Up/Down** to select item.
- ③. In non-OSD menu, move rocker **Left/ Right** to decrease/increase the volume.
- ④. In OSD menu, move rocker **Up/Down/ Left/Right** to do menu operation.

Remark:

- ①. The appearance varies depending on the model, and the actual product shall prevail.
- ②. Please use the remote control for more operation.

Keys of the Remote Control

Note: The appearance of the remote control may be different from this diagram; please refer to the real object as standard.

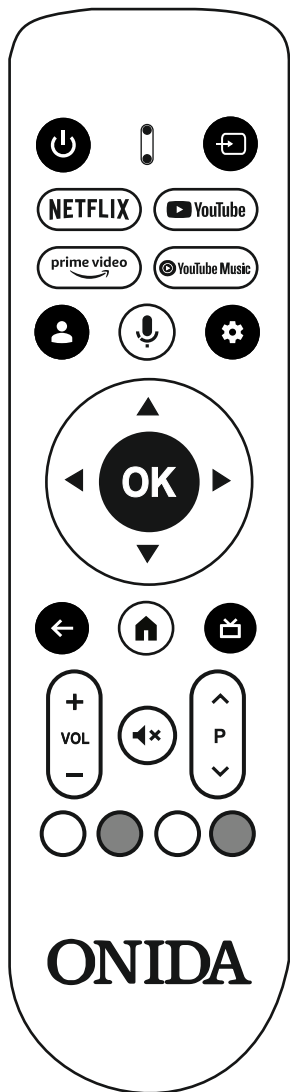

Keys	Function
Power (⏻)	Switch between working and standby status.
Source (📺)	Show signal source menu.
NETFLIX	Open application.
 YouTube	Open application.
 prime video	Open application.
 YouTube Music	Open application.
	Manage Google Account. (It is valid after login)
	Microphone / Google Assistant Use your voice to search for shows, control your TV, plan your day, and more. Just ask Google.
Setup (⚙️)	Open setting menu.
◀️▶️▲▼	Select items or adjust values.
OK	In TV mode, open channel list.In OSD menu operation, confirm the operation.
Back (⬅️)	Return to previous menu interface.
Home (🏠)	Show home page.
	Electronic program guide.
VOL+/-	Turn up/down the volume.
	To mute and un-mute the sound.
	Channel up / don
●●●● Colour buttons	Colour buttons: Press the colour button that corresponds to the function you want to use. Note: You can only use these buttons within certain menus or apps. If you can use these functions, the menu or app will provide information regarding what function corresponds to each colour button.

Bluetooth voice remote control operation manual

Bluetooth Pairing

If the Bluetooth of remote control is not paired, press the Google Assistant key, then long press [**←**] + [**⬆**] keys to pair. When the TV show the device, select it and press [**OK**] key to finish.

Note:

1. Some models may not be supported.
2. Your Location must correspond to the language for exact search results. Some functions may not be available if your location settings and language settings are different.
3. You can change the language according to language input settings. The languages available for Google Assistant may be changed in accordance with service operation policy.
4. Details of service may vary by model.
5. Before you use Google Assistant, you should make sure remote control paired.

Basic Operations

Remark:

1. The keys operation here refers to remote control operation, as for panel control keys operation, please refer to "**Panel Control Keys**".
2. Menu Operation Instruction in this manual explains the operation under TV mode, which could also be the reference to other modes.
3. Before powering on platform, please make sure that the power supply is stable.
4. The software of different countries is different. The specific software operation should be subject to the actual situation.
5. Because the product is constantly updated, the software is upgraded at any time, if the software operation is different from the actual operation, please refer to the actual product.

Turning on/Standby

Plug power cord into the electrical socket, then press [⏻] key to turn on the TV. When it is the first time to turn on the TV, the Initialization Settings interface appears, please set it as needed.

In power on state, press [⏻] key to switch to standby mode.

Signal source selection

You can connect various devices to the TV set and view high quality images. If the video device has HDMI, Composite and other video output ports. You can select one of them and connect to corresponding input ports of the TV set. After connection, turn on the device and press [⏻] key, then menu of signal source will be displayed on the screen. Press the [▲]/[▼] key to select the input signal, and press [OK] key to confirm.

Channel scanning

Scan the channels before watching the TV for the first time. Before scanning, please make sure that the antenna has been connected properly.

Analog (In ATV mode)

Press [⚙️] key, and select **Settings > Channels & Inputs > Channels > Analog**, and press [OK] key to enter.

- Select **Channel Scan**, then press [OK] key to start scanning.
- Select **Analog Manual Scan**, and set **Start Frequency(MHz)**. Select **Scan Up** or **Scan Down**, then press [OK] key to start scanning.

Antenna

Press [⚙️] key, and select **Settings > Channels & Inputs > Channels > Antenna**, and press [OK] key to enter.

- Select **Channel Scan**, then press [OK] key to start auto scanning.
- Select **Single RF Scan**. Press [◀]/[▶] key to set **RF Channel**, then press [OK] key to start scanning.

Cable

Press [⚙️] key, and select **Settings > Channels & Inputs > Channels > Cable**, and press [OK] key to enter.

- Select **Channel Scan > Others**, then press [OK] key. Set **Scan Mode**, **Frequency(KHz)**, **Network ID**, and select **Scan**, then press [OK] key to start scanning.
- Select **Single RF Scan**, then press [OK] key. Set **Frequency(KHz)**, and select **Scan**, then press [OK] key to start scanning.

Instructions for quick start

Note: Please log in to your Google Account to get access to more features.

Basic Operations

Press [**⬆**] key to show the home page.

1. Press [**⬅**]/[**➡**] key to select an application;
2. Press [**OK**] key to run the application;
3. Press [**⬅**] key to return to previous page.
4. Long press [**⬆**] key to display **Dashboard** window.

Quick Start

Before using this device, please get familiar with the operations below for better experience.

Language input setting

Language: In the smart mode, select the system language. Press [**⚙**] key, and select **Settings > System > Language**, and press [**OK**] key. Press [**▲**]/[**▼**] key to select the desired language, and then press [**OK**] key.

Selecting Input Method: In the smart mode, press [**⚙**] key, and select **Settings > System > Keyboard > Current keyboard**, and press [**▲**]/[**▼**] key to choose input method.

Setting System Time: In the smart mode, press [**⚙**] key, and select **Settings > System > Date & Time > Automatic date & time**, then select **Use network-provided time**. You can also set the system time

Smart Applications

Apps: The **Apps** helps users manage applications, and allows users to install or uninstall apps in local disk.

Press [**⬆**] key, then press [**▲**]/[**▼**]/[**⬅**]/[**➡**] key to select an application and press [**OK**] key to enter.

■ How to install an application?

Press [**⬆**] key, and select apps, then press [**OK**] key to enter, search apps you want and install them.

■ How to uninstall an application?

Press [**⬆**] key, and select the app that you want to uninstall, long press [**OK**] key and select to View details and uninstall it.

MultiMediaPlayer: Open **MultiMediaPlayer** app, and press [**OK**] key to enter and select **VIDEO, PHOTO, MUSIC and TEXT**.

■ Playing Files in local disk device: Before playing files in the local disk, insert the USB mass storage device into the USB interface.

Open **MultiMediaPlayer** app, and press [**OK**] key to enter. Select the target folder or file, press [**OK**] key to enter the folder or play the file, and press [**⬅**] key to return to the desktop.

Attention:

1. Non-standard USB devices can't be recognized probably; in this case, please replace a standard USB device;
2. The stream media system has certain restriction on the format of files; the playing will be abnormal if it is out of the system restriction;
3. Do not remove the USB device while playing, or else the system or device may have problem; Before replacing the USB device, please turn off the machine's power supply;
4. The system supports standard USB1.1 and USB2.0 devices, such as USB mass storage devices and mobile hard disks;
5. The maximum output current of the USB port of this device is 500mA, and the self-protection will be enabled if it is beyond this limit; please use external power supply if an external device of higher current will be connected;
6. The system is complicated; when it is reading or playing files, the screen may be still or certain functions may be invalid due to the compatibility and stability of the USB device; in this case, please turn off the device and re-initialize the system.

Instructions for quick start

Network Settings

Wi-Fi

1. In smart mode, press [**⚙**] key, select **Settings > Network & Internet > Wi-Fi**, and press [**OK**] key. Press [**▲**]/ [**▼**] key to select **OK**, and press [**OK**] key, then the machine automatically searches for nearby wireless network signal. The network searched without  icon indicate that the machine can connect to the network without a password. The network with  icon indicate that it is encrypted and you must enter the correct password to connect to the network;
2. Select the desired network from the list, and press [**OK**] key;
3. Enter the password in the password box, then select  and press [**OK**] key to connect to network.

Ethernet

1. Press [**⚙**] key, then select **Settings > Network & Internet > ETHERNET**;
2. Set **Proxy settings** and **IP settings**, then press [**OK**] key to connect to the internet.

Wow/Wol

It allows remote systems to wake up the sleeping TV by sending a frame of a specific format which the client anticipates. (It is available when network is connected.)

Press [**⚙**] key, and select **Settings > Network & Internet > OTHERS > Wake configs > WoW/WoL**, and press [**OK**] key to enter. Press [**OK**] key to set it to on or off.

Bluetooth Setting

In smart mode, press [**⚙**] key, and select **Settings > Remotes & Accessories**, then press [**OK**] key to enter. Select the device which you want to connect to and press [**OK**] key, then follow the prompt to connect.

Note: Select **Settings > System > About > Device name**, and you can check the TV name.

Recommendations

Google Assistant

Use your voice to search for shows, control devices, and more - just ask Google.

Chromecast built-in™

Easily cast movies, shows, photos, and more from your phone right to your TV.

Important Statement on Network Services

All contents and services obtained from this TV set belong to the third party and are protected by laws on copyright, patent right, trademark right and/or other intellectual property right. The said contents and services are only for your non-commercial purposes. It is not allowed to use any content or service without the authorization of the content owner or the service provider.

Our company will undertake no liability for any direct, indirect and accidental losses or damages caused by your or a third party's access to any content or service or any information or any third party software through this set under any circumstances.

Third party service may be changed, deleted or stopped without prior notice. Our company neither implies nor guarantees the continuous availability of some service or content within any period of time.

Our company is not held responsible for services related to the said service and content. Besides, we will not bear any liability for client service. Please directly contact relevant content and service providers if you have any problem and service request concerning relevant service or content.

Troubleshooting

■ **Snowflake spots occur in the TV images and there is noise in accompanying sound.**

1. Check if the antenna plug is loose or the cable is in good condition.
2. Check the antenna type (VHF/UHF).
3. Adjust the direction and position of the antenna.
4. Try to use signal enhancer.

■ **There is neither display nor sound on the screen.**

The indication light is not on.

Check if the power line is connected.

■ **Dotted line or strip disturbance occurs in TV images.**

Do not use electric hair dryer aside the TV set and adjust the antenna direction to reduce disturbance.

■ **Double images occur on the TV screen.**

1. Use high oriented antenna.
2. Adjust the direction of the antenna.

■ **The images are colorless.**

Press [⚙️] key and select **Picture > Saturation** to increase color saturation.

■ **The TV has no accompanying sound.**

1. Adjust the volume to a proper degree.
2. Press [🔊] key on the remote control to cancel mute mode.

■ **No signal input images show on the machine screen. The indicator light is blinking.**

1. Check if the signal connecting cable is loose or falls off. Reconnect it.
2. The machine may be in standby mode, please reboot.

■ **The remote control distance is short or out of control.**

1. Remove the object to avoid blocking the remote control receiving window.
2. Replace the battery.

■ **The browser cannot access any link.**

1. Ask the network administrator to obtain available IP address and other parameters.
2. Check if the network connecting cable is normally connected.
3. Consult the network service provider.

■ **Online video play is very slow.**

1. Please upgrade your network bandwidth to a higher one.
2. Please try to replace with other addresses to obtain better resources.

■ **Machine is slow, system crash, can't operate the machine.**

Disconnect the power supply first, and connect the power supply after about 1-2 minutes, then turn on the TV again.

PRODUCT SPECIFICATION

MODEL CODE	DESCRIPTION	50		55		65	
		MZ50MIN,MZ50MIT MZ50MIA,MZ50MIF MZ50MIM,MZ50MIK ,MZ50MI-R		MZ55MIN,MZ55MIT MZ55MIA,MZ55MIF MZ55MIM,MZ55MIK ,MZ55MI-R		MZ65MIN,MZ65MIT MZ65MIA,MZ65MIF MZ65MIM,MZ65MIK ,MZ65MI-R	
CONFIGURATION	DDR	2GB					
	FLASH	16GB					
	CPU	CORTEX-A55 QUAD CORE, 1.5 GHZ					
	GPU	MALI-G52MP2 DUAL CORE					
	OPERATION SYSTEM	ANDROID 11					
PANEL	OPEN CELL	CHOT-CV500U5-T01		LG-LC550EQQ-SMA4		LG-LC650EQQ-SMA3	
	RESPONSE TIME TYP.	7MS		6MS		8MS	
	COLOR GAMUT	1.04		1.05		1.05	
	RESOLUTION	3840*2160					
	BRIGHTNESS(TYP)	>700(10% APL)					
	BRIGHTNESS UNIFORMITY	90%					
	CONTRAST RATIO	100000:1					
	VIEWING ANGLE	178 DEGREE					
	REFRESH RATE	60HZ					
	COLORS	1.07B 95% NTSC					
	MEMC	YES					
PICTURE	MODES	USER/STANDARD/VIVID/SPORT/MOVIE/GAME/ENERGY SAVING					
	ASPECT RATIO	16:09					
	PICTURE RESET	YES					
	SHARPNESS	YES					
	DNR	YES					
	CONTRAST	YES					
	COLOR TEMPERATURE	USER/COOL/STANDARD/WARM					
	LED DIMING METHOD	YES					
SOUND	SPEAKER RATING (W)	8OHM/10W					
	SPEAKER TYPE	BOX					
	SOUND MODES	USER/STANDARD/VIVID/SPORT/MOVIE/MUSIC/NEWS					
	EQUILIZER	YES					
	AUDIO SYSTEM	DOLBY/DIGITAL/DIGITAL+/DOLBY ATMOS					
	SURROUND SOUND	YES					
	SOUND BALANCE	YES					
	AUDIO OUT	YES					
	ARC	ARC/EARC (AVAILABLE)					
	AVL	YES					
	SOUND RESET	YES					
	CERTIFICATION	DOLBY					
REMOTE	NO OF KEYS	19					
	NO OF HOT KEYS	4					
	BATTERY TYPE	AAA					
	BATTERY NOS	2					
	KEYS TYPE	PRESS					
	IR NOS	1					
	BT OPTION	YES					
	REMOTE RANGE (STRAIGHT/ 30 ANGL	8MTR					
AC POWER	POWER RATING	100~240V					
	POWER PLUG DETAIL	2PIN					
	POWER CONSUMPTION	150W		210W		380W	
	STD BY (POWER)	<0.5W		<0.5W		<0.5W	
WIFI	WIFI MODULE (MODEL)	2T2R					
	WIFI MODULE (RATING)	2.4/5G					
	BT MODULE (RATING)	V5.1					
I/O SOURCE	USB (TYPE)	USB2.0		USB2.0		USB2.0	
	HDMI (LOCATION & SPECS)	HDMI2.0(X2) SIDE		HDMI2.0(X2) SIDE		HDMI2.0(X2) SIDE	
	HDMI (LOCATION & SPECS)	HDMI2.1(X1) SIDE		HDMI2.1(X1) SIDE		HDMI2.1(X1) SIDE	
	USB (LOCATION & SPECS)	(USB2.0X2)		(USB2.0X2)		(USB2.0X2)	
	AV (LOCATION & SPECS)	MINI AV -1		MINI AV -1		1	
	RF (LOCATION & SPECS)	1		1		1	
	AUDIO OUT(LOCATION & SPECS)	1		1		1	
	OPTICAL OUT(LOCATION & SPECS)	1		1		1	
	ETHERNET(LOCATION & SPECS)	1		1		1	

PRODUCT SPECIFICATION

MODEL CODE	DESCRIPTION	50	55	65
		MZ50MIN,MZ50MIT MZ50MIA,MZ50MIF MZ50MIM,MZ50MIK ,MZ50MI-R	MZ55MIN,MZ55MIT MZ55MIA,MZ55MIF MZ55MIM,MZ55MIK ,MZ55MI-R	MZ65MIN,MZ65MIT MZ65MIA,MZ65MIF MZ65MIM,MZ65MIK
PRODUCT DIMENSION	TV DIMENSION (WITH STAND)	1.11 Mx30.5 cmx70 cm	1.22 Mx30.5 cmx76.7 cm	1.45 Mx36.5 cmx89.3 cm
	TV DIMENSION (WITHOUT STAND)	1.11 Mx8 cmx64.3 cm	1.22Mx8.3 cmx71 cm	1.45 Mx 6.8 cmx83.5 cm
FOR ROCK MODEL	TV DIMENSION (WITH STAND)	1.11 Mx30.5 cmx70 cm	1.22 Mx30.5 cmx76.7 cm	NA
FOR ROCK MODEL	TV DIMENSION (WITHOUT STAND)	1.11 Mx9.5 cmx64.3 cm	1.22Mx9.8 cmx71 cm	NA
FOR ROCK MODEL	NET WEIGHT (WITH STAND)	12.6kg	14.6kg	23.4kg
	GROSS WEIGHT	18.5kg	21kg	30.5kg
	NET WEIGHT (WITH STAND)	13.7 kg	15.7 kg	NA
FOR ROCK MODEL	GROSS WIGHT	20 kg	22.5 kg	NA
	WALL MOUNT SIZE	300*200mm	400*200mm	400*300mm
	NO OF KEYS (DETAIL)	1	1	1
	IR LOCATION & COLOR		BOTTOM/BLUE	
	SPEAKER PLACEMENT	Bottom	Bottom	Bottom
PACKAGING	PACKING BOX DIMENSION (OUTER)	1.21Mx16cmx73 cm	1.32Mx18.5cmx78 cm	1.58Mx24cmx92.5 cm
	PACKING BOX DIMENSION (OUTER)	1.21Mx21 cmx73 cm	1.32 Mx23.5 cmx78 cm	NA
	PACKING BOX PLY	5	5	5
	FRONT PROTECTION (TYPE)	ZIG ZAG EPS + PROTECTION SHEET	ZIG ZAG EPS + PROTECTION SHEET	ZIG ZAG EPS + PROTECTION SHEET
	OUTER PROTECTION (TYPE)	TOP + BOTTOM SIDE CORNERS + STRAPPING BELT		
ACCESSORIES	REMOTE CONTROL		YES IR/BT	
	INSTRUCTION MANUAL		YES	
	WALL MOUNT+ FIXING ACCESSORIES		YES	
	STAND + SCREW		YES	
	BATTERIES		YES	

Note:

Some specifications may vary by different regions or model and please take yaJur actual TV set as standard. Internal memory capacity may vary depending on pre-installed software.

Base Installation Instructions

HDMI display mode


Video mode			
NO.	Mode	Resolution	Refresh rate
1	SD	720×480i/p	60Hz
2		720×576i/p	50Hz
3	HD	1280×720p	50Hz
4			60Hz
5	FHD	1920×1080i/p	50Hz
6			60Hz
7	UHD	3840×2160p	24Hz
8			25Hz
9			30Hz
10			50Hz
11			60Hz

Remark: Under UHD mode, 50Hz and 60Hz refresh rate is effective only under HDMI version 2.0/2.1.

VESA mode			
NO.	Mode	Resolution	Refresh rate
1	VGA	640×480	60Hz
2	SVGA	800×600	60Hz
3	XGA	1024×768	60Hz
4	SXGA	1280×1024	60Hz
5	WXGA	1600×900	60Hz
6	WUXGA	1920×1080	60Hz
7	4K	3840×2160	30Hz
8			60Hz

Remark: Under 4K mode, 60Hz refresh rate is effective only under HDMI version 2.0/2.1.

 Put the machine flat first, distinguish left and right base and base installation front and back direction, then install the bases in the bottom of the machine back cover as arrow direction in figure. Align screw holes, then fasten screws (notice that base module has to be adjusted at figure status, otherwise it cannot be installed in.)

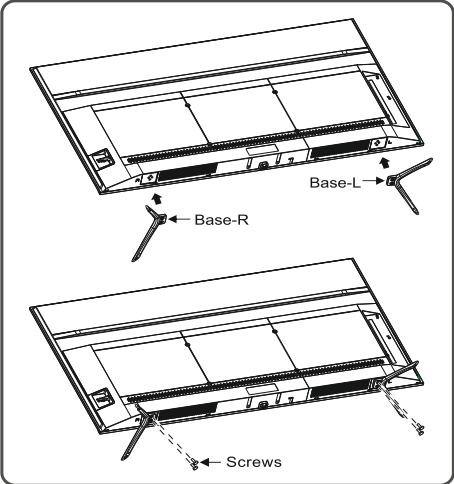

Remark: The actual base and machine appearance may be different from pictures; please refer to the actual device.

LICENSE



Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, and Chromecast built-in and other related marks are trademarks of Google LLC.



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

- Note:
1. The pictures in this document are only for reference.
 2. Appearances and specifications are subject to change without notice.
 3. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the TV as you will.

E=Waste Recycling Policy

Under the guidelines of the Central Government of India, E-Waste (Management and Handling) Rules 2016 have been notified. ONIDA stands committed to implement E-Waste Rules. E-waste has been defined as

"Waste electrical and electronic equipment. whole or in part or rejected from their manufacturing and repair process. which are intended to be discarded".

Whereas, Electrical and electronic equipment has been defined as

"Equipment which is dependent on electrical currents or electro-magnetic fields to be fully Functional".

In general terms e-waste is any end of life electronic product which is scrap and cannot be used in any manner e.g. air conditioners, refrigerator, batteries, television, mobiles, etc. Managing of e-waste is most important because it consists of harmful substances which can bring adverse effects to the environment as well as human life. By scientific disposal of e-waste we can save our environment and also prevent its potential negative consequences on human health. There is need to encourage recycling of all useful and valuable material from e-waste so as to conserve the ever depleting natural resources. Recycling end-of-life products is vital if we are to save resources and minimize waste.

Impact of improper handling/ dumping/ disposal/accidental breakage/recycling of E. Waste:

- Toxic material present in e-waste get mixed with earth, air, water etc and causes health Issues.
- Oil & Gases which is present in some of e-waste causes environment pollution. Batteries contains highly hazardous element.
- Burning of rubber & plastic in open area causes air pollution.
- Bad impact on human being, animal, and other animates.
- Wastage of natural resources.

How can you Recycle the E-Waste Products? (Do's)

- All electrical and electronic products are required to be handed over only to the authorized recycler for recycling and disposal.
- Keep the e-waste in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.
- You can also deposit your e-waste directly at the collection centers. For information of collection centers

Please visit www.onida.com

Don'ts for E- Waste

- The product should not be opened by the user himself/herself, but only by authorized service personnel.
- The product is not meant for re-sale any unauthorized agencies/scrap dealer/kabariwalaas.
- The product is not meant for mixing into household waste stream.
- Do not keep any replaced spare part(s) from the product in exposed area



As per the Government of India's E -Waste Management Rule 2016, End of Life Products intended to be discarded should be channelized for dismantling and recycling through authorized dismantler and recycler only, to ensure environmentally sound management of E - Waste.

It cannot be disposed Off with the general Household Waste so as to prevent any damage to the Environment.

To facilitate return of End of Life product visit our website www.onida.com for details or contact nearest authorised Service Center. We request you to support us in our endeavour to ensure an environment friendly nation.

WARRANTY TERMS & CONDITIONS:

Terms And Conditions Of The Warranty

- The Onida LCD 'LED TV set is guaranteed against manufacturing defects Of parts & components for a period Of one year from the date Of purchase
 - In the event Of any manufacturing defect during the warranty period, the defective part Will be replaced/repaired by the Company free Of cost
 - This Warranty is limited Within municipal limits.
 - This warranty does not extend to any part Of the set Which has been damaged due to misuse, neglect, accident or improper installation, damages caused by pets or any external agents such as lightning, flooding, fire etc.
 - Further this warranty shall cease to be operative in the event Of the set having been tampered With, serviced or repaired by any agency not authorized by the Company
 - The company does not also cover loss or damage in transit whether carried by the Company's transport or by the purchaser.
 - The Company Will not be liable for the dealer's expenses, if any, charged in carrying out the terms Of this warranty.
 - The Company Will not be liable for any delay in rectifying the set, in the event Of non- availability Of spares.
 - The Company Will also not be responsible for losses, direct or indirect , arising out Of the delay, if any.
 - This warranty does not cover ghosting or fading effect, in the picture, caused by the situation Of the purchaser's residence, where the set is located.
-
- This warranty does not extend to accessories (including aerial), any, supplied With this set. In the event the set requires attention at the Companies Service Station, the Company shall arrange the to and fro transportation during warranty period.
 - If the purchaser desires to send this set for a general checkup/repair to the Service Station, he Will have to bear the to and fro cost.
 - Maximum care is taken to ensure that the set and aerial are shockproof. However the Company will not be liable for any loss or damage cause to property, for death & disability cause to human life for any reason whatsoever.
- This warranty is issued subject to jurisdiction Of civil courts in Mumbai.

Warranty Is Null And Void, If

- The Service Centre copy Of warranty card is not dispatched Within 10 days Of the date Of purchase.
- The TV set is not purchased from the authorized dealer Of the company. (Customers are requested to check the Dealers Authority Certificate).

The type or serial no. on the product has been altered, removed, or defaced.

The product is not operated as per the instructions given in the User Guide, if any.

The defects are caused by household pets, rats, cockroaches or any other animals or insects.



MIRC ELECTRONICS LTD

Onida House,G-1,MIDC,Mahakali Caves Road,
Andheri(E),Mumbai-400093
Tel No.7490955555
Email:customer.care@onida.com

Customer’s Warranty Card

THIS WARRANTY STANDS NULL AND VOID IF THE SERVICE CENTRE COPY OF
WARRANTY CARD IS NOT DESPATCHED WITHIN 10 DAYS OF DATE OF PURCHASE

Customer Name _____

Address _____

Name of the Town _____

Dealer’s Name _____

Model No. _____ Chassis No. _____

Date of purchase _____

Date of Expiry of Warranty _____

I accept the terms & conditions of the warranty _____ Signature _____

Service Station Copy

Customer Name _____

Address _____

Name of the Town _____

Dealer’s Name _____

Model No. _____ Chassis No. _____

Date of purchase _____

Date of Expiry of Warranty _____

I accept the terms & conditions of the warranty _____ Signature _____

 


Customer Care Number

7490955555

Timing-9 AM to 9PM

E-Mail:customer.care@onida.com

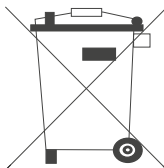

As per the Government of India's E-Waste Management Rule 2016, End of Life Products intended to be discarded should be channelized for dismantling and recycling through authorized dismantler and recycler only, to ensure environmentally sound management of E - Waste.

It cannot be disposed off with the general Household Waste so as to prevent any damage to the environment.

To facilitate return of End of Life product visit our website www.onida.com for details or contact nearest authorized Service Center.

We request you to support us in our endeavour to ensure an environment friendly nation.

Business Reply Card

SERVICE CENTRE

ONIDA

**For any queries or
support reach out to:**

Tel. No : +91 7490955555

E-Mail:customer.care@onida.com