


User's Manual

FULLY AUTOMATIC WASHING MACHINE

T65CDN/T65CDN1

Black Pearl

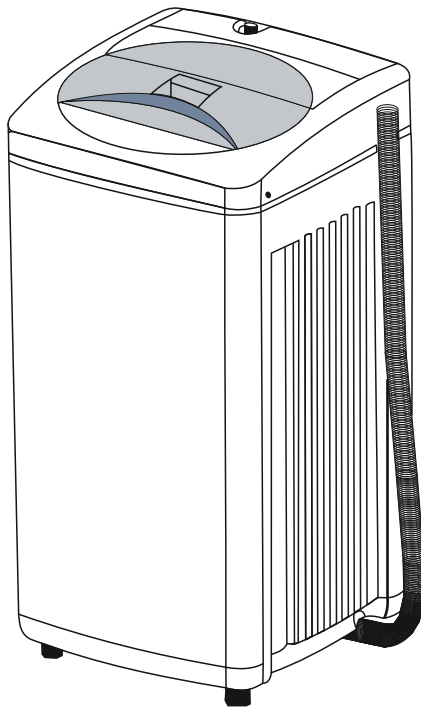

Before operating the Washing Machine, Please read this Guide thoroughly, and retain this manual for future reference.

TABLE OF CONTENTS

1 Important instructions for safety and environment	4	6 Maintenance and cleaning	16
General safety	4	Cleaning the detergent drawer	16
Intended use	5	Cleaning the body and control panel	16
Children's safety.	5	Cleaning the water intake filters	16
		Cleaning the filter bag	17
		Wiring diagram	17
2 Your washing machine	6	7 Troubleshooting	18-19
Overview	6		
Technical specifications	7		
3 Installation	8	8 E-Waste Management	20
Appropriate installation location.	8		
Connecting water supply.	8	8 Warranty	21-22
Connecting to the drain.	9		
Adjusting the feet	9		
Connection of inlet hose connector and tap			
Connecting to the water supply	10		
Using detergent /softener	11		
Put rat guard into the machine	11		
4 Preparation	12		
Preparing laundry for washing.	12		
Things to be done for energy saving	13		
Using detergent and softener	13		
5 Operating the product	14		
Control panel	14		
Process selection.	15		

1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

General safety

- This product can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children must not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Never place the product on a carpet-covered floor. Otherwise, lack of airflow beneath the machine will cause electrical parts to overheat. This will cause problems with your product.
- If the product has a failure, it should not be operated unless it is repaired by the Authorized Service Agent. There is the risk of electric shock!
- This product is designed to resume operating in the event of powering on after a power interruption. If you wish to cancel the programme, see "Cancelling the programme" section.
- Connect the product to a grounded outlet protected by a 6A fuse. Do not neglect to have the grounding installation made by a qualified electrician. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.
- The water supply and draining hoses must be securely fastened and remain undamaged. Otherwise, there is the risk of water leakage.
- Never remove the filter while there is still water in the drum. Otherwise, risk of flooding and injury from hot water will occur.
- Unplug the product when not in use.
- Never wash the product by spreading or pouring water onto it! There is the risk of electric shock!
- Never touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Use detergents, softeners and supplements suitable for automatic washing machines only.
- Follow the instructions on the textile tags and on the detergent package.
- The product must be unplugged during installation, maintenance, cleaning and repairing procedures.

Important instructions for safety and environment

- Always have the installation and repairing procedures carried out by the **Authorized Service Agent**. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
If the power cable is damaged, it must be replaced by the manufacturer,
 - after sales service or a similarly qualified person (preferably an electrician) or someone designated by the importer in order to avoid possible risks.
 - Place the product on a rigid, flat and level surface.
Do not place it on a long-pile rug or similar surfaces.
 - Do not place the product on a high platform or near the edge on a cascaded surface.
Do not place the product on the power cable.
 - Never use sponge or scrub materials. These will damage the painted, chrome plated and plastic surfaces.
- Note:- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

Intended use

- This product has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.

 Warning:Please do not put your finger into gap between this cover and lid! 	Caution: Do not put your hand, finger or any object below the lid while closing it, this may cause injury to hand, finger or damage the object. 
--	---

- The product must only be used for washing and rinsing of laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of your product is 10 years. During this period, original spare parts will be available to operate the appliance properly.

Children's safety


- Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.
- Electrical products are dangerous for the children. Keep children away from the product when it is in use. Do not let them to tamper with the product. Use child lock to prevent children from intervening with the product.

2 Your washing machine

Overview

The graphics in this manual are all schematics, please refer to the physical appearance of the purchased product.

Use the new hose assembly that comes with the apparatus; the old hose assembly cannot be reused.

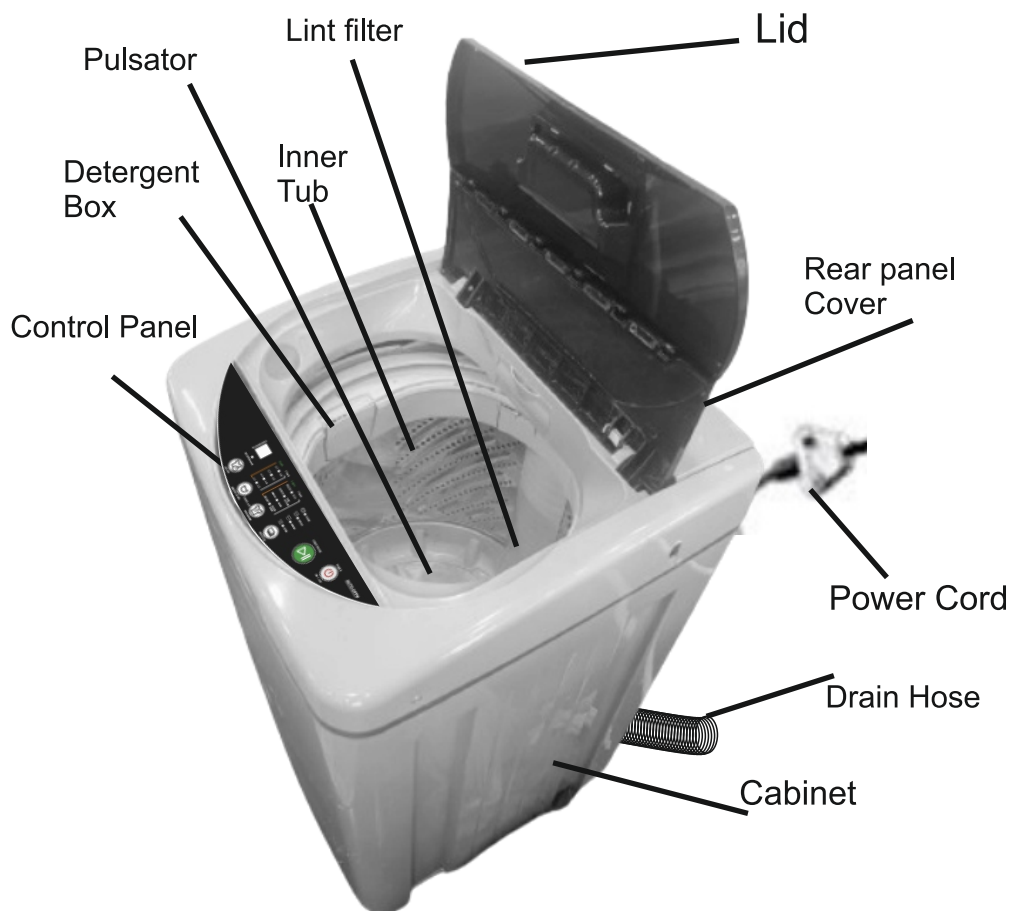

★ Some parts may vary according to model.

Your washing machine

Technical specification

Models (EN)	T65CDN/T65CDN1
Capacity	6.5 kg
Width (mm)	515
Depth (mm)	530
Height (mm)	910
Net weight (Kg)	26.5
Electric input (V/Hz)	230V AC/50Hz
Total power (W)	360 W

Packing list

Name	Quantity
● Washing Machine	● One Set
● Owner Manual	● One piece
● Inlet Hose	● One piece
● Rat Mesh	● One piece
● Drain Hose	● One piece
● Drain Hose clamp	● One piece



Technical specification may be changed without prior notice to improve the quality of the product.



Figures in this manual are schematic and may not match the product exactly.



Values stated on the product labels or in the documentation accompanying it are obtained in labotary condition in accordance with the relevant standards. depending on operational and environmental condition of the product, these values may vary.

3 Installation

Refer to the nearest Authorised Service Agent for installation of the product. To make the product ready for use, review the information in the user manual and make sure that the electricity, tap water supply and water drainage systems are appropriate before calling the Authorized Service Agent. If they are not, call a qualified technician and plumber to have any necessary arrangements carried out.

	Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
	WARNING: Installation and electrical connections of the product must be carried out by the Authorized Service Agent. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
	WARNING: Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety.
	Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.

Appropriate installation location

- Place the machine on a rigid floor. Do not place it on a long pile rug or similar surfaces.
- Place the product on a solid and flat floor that has sufficient load carrying capacity!
- Do not place the product on the power cable.
- Do not install the product at places where temperature may fall below 0°C.
- Place the product at least 1 cm away from the edges of other furniture.

Connecting water supply

	The water supply pressure required to run the product is between 1 to 8 bars (0.1 – 0.8 MPa). It is necessary to have 10 – 80 liters of water flowing from the fully open tap in one minute to have your machine run smoothly. Attach a pressure reducing valve if water pressure is higher.
	If you are going to use the double water-inlet product as a single (cold) water-inlet unit, you must install the supplied stopper to the hot water valve before operating the product. (Applies for the products supplied with a blind stopper group.)
	WARNING: Models with a single water inlet should not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate.
	WARNING: Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry.

1. Connect the hose supply to the product for cold water inlet.


	WARNING: Ensure that the cold and hot water connections are made correctly when installing the product. Otherwise, your laundry will come out hot at the end of the washing process and wear out.
--	--

2. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.
3. Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leaks occur, turn off the tap and remove the nut. Retighten the nut carefully after checking the seal. To prevent water leakages and damages caused by them, keep the taps closed when the machine is not in use.


Installation

Connecting to the drain

- The drain pipe must be put in place, otherwise may cause leakage.

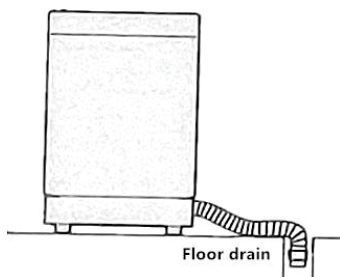

- The drain pipe must put down when the machine is working, and keep it not tangling.

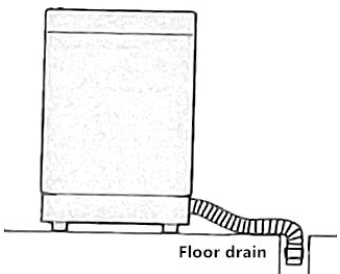




- The drain pipe should be less than 10cm, otherwise it may cause the machine can't normal spinning.



WARNING: Your house will be flooded if the hose comes out of its housing during water discharge. Moreover, there is risk of scalding due to high washing temperatures! To prevent such situations and to ensure smooth water intake and discharge of the machine, fix the end of the discharge hose tightly so that it cannot come out.

Adjusting the feet

- The left front feet of washing machine can adjust the positive, when the washing machine is not level, you can up the front of washing machine for a little, then left or right rotation to adjustable the feet, make it level. You can check the level by the help of the indicator on top cover.

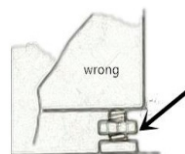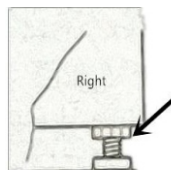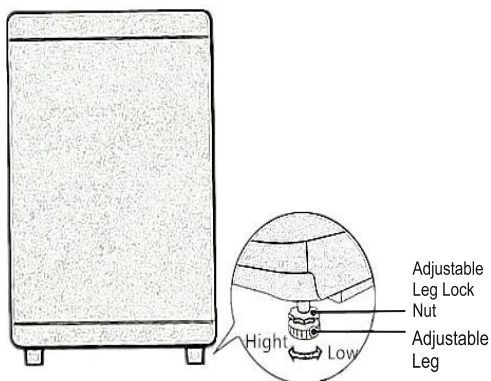

Installation

3.5 Electrical connection

Connect the product to a grounded outlet protected by a 5A fuse. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.

- Connection must comply with national regulations.
- Power cable plug must be within easy reach after installation.
- If the current value of the fuse or breaker in the house is less than 5Amps, have a qualified electrician install a 5Amp fuse.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs.



WARNING: Damaged power cables must be replaced by the Authorized Service Agents.

Transportation of the product


1. Unplug the product before transporting it.
2. Remove water drain and water supply connections.
3. Drain all water that has remained in the product.
4. Install all styrofoams and then pack the machine.



WARNING: Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.

3.6 Connection of inlet hose connector and tap

1. Press down the cap, remove the inlet h connector as shown in Fig a.
2. Loosen four screws on the inlet h connector, put the connector on the tap as shown in Fig b.
If the tap caliber is too large and the connector can not put on it, loosen four screws and remove the bushing as shown in Fig c.
3. Tighten four screws as shown in Fig d
4. Tighten nuts as shown in Fig e

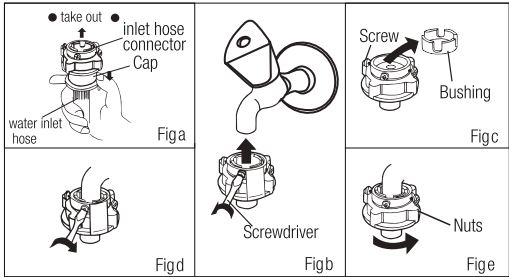


Installation

Connecting to the water supply

Important:

- The water supply pressure required to run the machine must be 1- 8 bar (0.1 –0.8 MPa).
- Connect the special hoses supplied with the machine to the water intake valves on the machine.

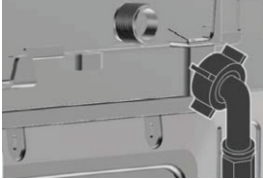

- Applies for the products supplied with a blind stopper group.
- Models with a single water inlet should not be connected to the hot water tap.
- When returning the appliance to its place after maintenance or cleaning, care should be taken not to fold, squeeze or block the hoses.

Using detergent /softener

When using detergent, softener, starch, fabric dye, bleach or limescale remover read the manufacturer's instruction the package carefully and follow the suggested dosage values. Use measuring cup if available.



Softner Box



Detergent Drawer

Put rat guard into the machine

The rat mesh provided along with the machine. In case of risk of rats you can assemble the rat mesh under the base of the machine on chassis as shown in the image.



Preparing laundry for washing

- Laundry items with metal attachments such as, underwired bras, belt buckles or metal buttons will damage the machine. Remove the metal pieces or wash the clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "machine washable" or "hand washable" labeled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing. If unsure, check with a dry cleaner.
- Use only dyes/colour changers and limescale removers suitable for machine wash. Always follow the instructions on the package.
- Wash trousers and delicate laundry turned inside out.
- Keep laundry items made of Angora wool in the freezer for a few hours before washing. This will reduce pilling.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the machine. Such dusts and powders on the laundry may build up on the inner parts of the machine in time and can cause damage.

Things to be done for energy saving

Following information will help you use the product in an ecological and energy-efficient manner.

- Operate the product in the highest capacity allowed by the programme you have selected, but do not overload.
- Always follow the instructions on the detergent packaging.
- Do not use detergent in excess of the amount recommended on the detergent package.

Preparation

Using softeners

Pour the softener into the softener compartment of the softener drawer. If your machine is without softener drawer or with simple softener drawer softener can be put at the dedicated compartment on the balance ring.

- If the softener has lost its fluidity, dilute it with water before putting it in the softener drawer.

Using gel and tablet detergent

Apply the following instructions when using tablet, gel and similar detergents.

- If the gel detergent thickness is fluidal, put the gel detergent into the main wash detergent compartment during first water intake.
- If the gel detergent thickness is not fluidal or in the shape of capsule liquid tablet, put it directly into the drum before washing.
- Put tablet detergents into the main wash compartment or directly into the drum before washing.



Tablet detergents may leave residues in the detergent compartment. If you encounter such a case, place the tablet detergent between the laundry, close to the lower part of the drum in future washings.

Using bleaches


- Add the bleaching agent to the dedicated compartment on the top cover.
- Do not use bleaching agent and detergent by mixing them.
- Use just a little amount of bleaching agent and rinse the clothes very well as it causes skin irritation. Do not pour the bleaching agent onto the clothes and do not use it for coloured clothes.

Using starch

- Add liquid starch, powder starch or the fabric dye into the softener compartment.
- Do not use softener and starch together in a washing cycle.
- Wipe the inside of the machine with a damp and clean cloth after using starch.

5 Operating the product

Control panel

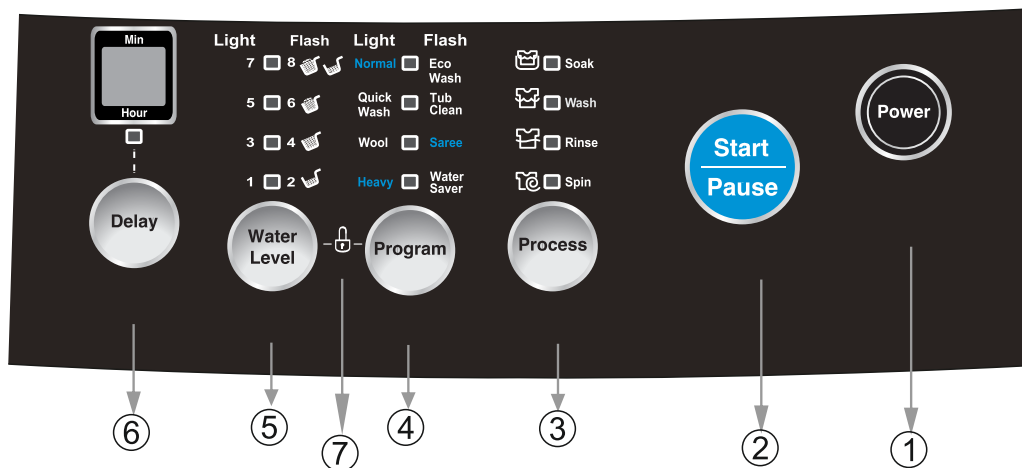

1. - Power Button 2. - Start / Pause Button 3. - Process Button
4. - Program Button 5. - Water Level Button 6. - Delay Button 7. - Child lock mode

1. Power key

Press the key continuously to turn on and off the power

2. Start/Pause

Press this key to start the washing machine.

During the washing process, press this key to pause halfway

3. Process

Press the process key continuously to select a single washing process or a combination of processes.

4. Program

According to the type of laundry and soil,
Select the course.

Eg. Normal Wash course.

course, select how many hours later you wish to complete the entire Operations.

5. Water level selection

The water level can be changed according to their own needs.

6. Delay

Press the button to set how many hours later the operation will be completed

7. Child Lock

Press both the buttons (Water Level & Program) to activate Child Lock. Use Child Lock to prevent Children from intervening with the product.

Operating the product


Process selection



Figures in this manual are schematic and may not match the product exactly.


• Soak

Select this function if you like to wash your laundry by soaking. Soaking is recommended for heavily soiled laundry items. You can add your normal amount of detergent and start the wash programme by selecting this function.

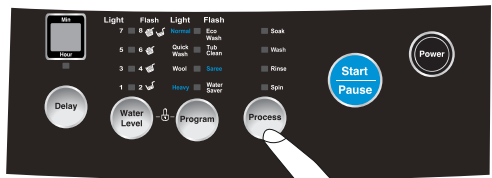


• Wash

Select this function if you like to wash your laundry.

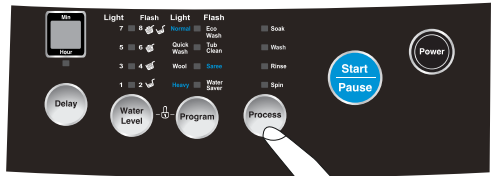


• Rinse

Use this programme when you want to rinse or starch separately.

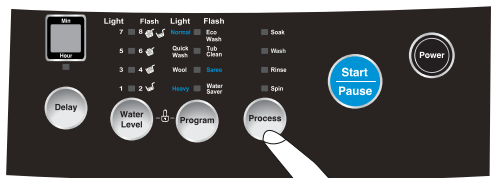

• Spin


Use this programme to apply an additional spin cycle for your laundry or to drain the water out of the machine.

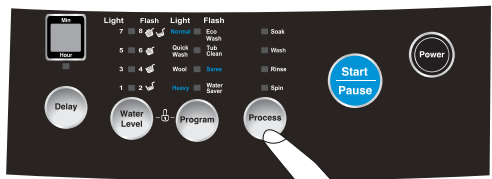

Program selection



Figures in this manual are schematic and may not match the product exactly.

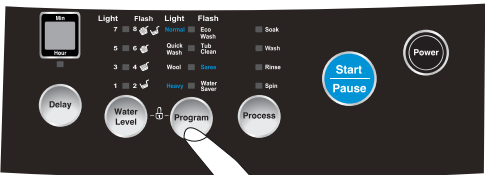

• Fuzzy

Intelligent selection of the appropriate program, with fuzzy weighing function.

• Quick

Suitable for small items of laundry with light soiling.

• Wool

For washing machine washable woolen clothes.

• Heavy

For washing machine washable Heavy clothes like Jeans and is also suitable for heavily soiled items.

• Eco

Used for Energy saving.

• Tub Clean

Program for cleaning and caring for the drum and the impeller, e.g. before running the first wash cycle or if an odor has developed after an extended period of non-use.

• Sari

Used for mixed washing of clothes of various materials.

• Aqua save


After rinsing the clothes, washing machine keeps the water before the final spin - dry and uses it again to save water.

Light

Light will be turn on for left side operation

Flash

Light will Blink for right side Operation

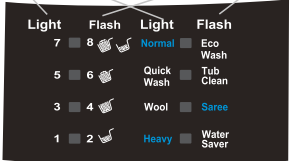

6 Maintenance and cleaning

Service life of the product extends and frequently faced problems decrease if cleaned at regular intervals.

Cleaning the detergent drawer

Clean the detergent drawer at regular intervals (every 4-5 washing cycles) as shown below in order to prevent accumulation of powder detergent in time.



1. Detergent drawer is closed.
 2. Pulling detergent drawer to the front side.
 3. Turning detergent drawer to upper side, and taking drawer out.
- Cleaning detergent drawer by water.


Cleaning the body and control panel

Wipe the body of the machine with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth.

Use only a soft and damp cloth to clean the control panel.

Cleaning the water intake filters

There is a filter at the end of each water intake valve at the rear of the machine and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the washing machine. Filters should be cleaned as they do get dirty.

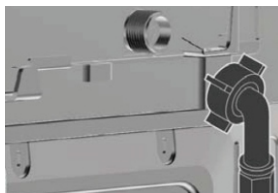

1. Close the taps.
2. Remove the nuts of the water intake hoses to access the filters on the water intake valves. Clean them with an appropriate brush. If the filters are too dirty, take them out by means of pliers and clean them.
3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
4. Replace the gaskets and filters carefully in their places and tighten the hose nuts by hand.



Cleaning filter bags

When the water level reaches a certain level, some of the lint from the washing process will be collected in the filter bag. Please clean the lint in the filter bag regularly. the specific operation method is as follows.

Cleaning filter bags method



pull out the filter bag to the outside




clean the filter bag



assemble the filter bag

Wiring Diagram

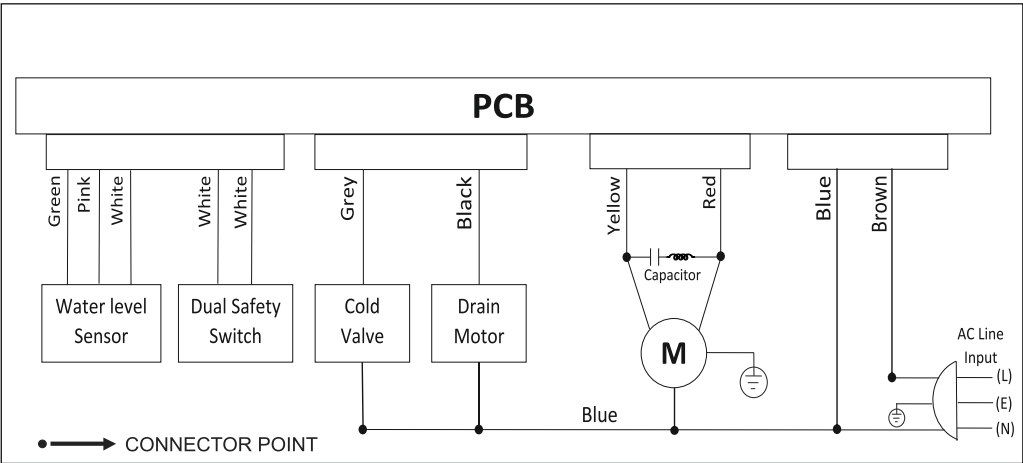

7 Troubleshooting

Problem	Check & Solution
The power is cut off.	- Is the electric voltage normal? - Is the washer plugged in? Plug in the electric cord.
Water does not drain.	- Is the drain hose down? put the drain hose down. - Is the drain hose folded? Unfold the drain hose. - Is the drain hose outlet clogged? Remove the waste cleanly.
Washing machine won't work .	- Is the washer lid open? close the lid. - Is the Pause button on? Press the start/Pause button one more time and check if the washer starts. - Is enough water filled to the water level? - Is water pressure is low, it takes a long time to start washing.
If the drain hose, water tap and drum are frozen, do as follows.	- Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. - Pour hot water into the drum for about 10 minutes. - Put a hot water towel on the drain hose connector. - if the drain hose defrosts, connect again and check for proper water draining.
The water does not drain out immediately.	- The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. - Half fill the drum with water and try for spinning again.
The water leaks at the water supply hose connector.	- Is the connecting part is loose, water may leak. report the assembling steps again. (refer to "Connection of inlet hose connector and tap" and "Connecting to the water supply") - Is the water supply hose folded? unfold the hose. - If the water supply is too strong, water may leak. close the tap a little. - Is water leaking from the tap itself? fix the tap.
Water is not supplied.	- Did you press the Start/Pause button after selecting the water supply? If the Start/Pause button is not pressed, water is not supplied. press the Start/Pause button. - Is the tap Closed? Turn on the tap. - Is the filter net at the water supply hose connector clogged with dirty matters? clean the filter net by brushing with toothbrush. - Is the water supply cut off? If the water supply suspended, turn off the tap and power off.
Spinning makes loud noises and vibration.	- Check if the laundry is spread evenly in the washer. spread out the laundry evenly and start again. - check if the washing machine levels on a sturdy flat floor. Set the machine at level. Adjust the feet for leveling. - Is around the washing machine filled with unnecessary stuffs? Remove those unnecessary things away from the wash machine.



WARNING: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

Troubleshooting

If the washer fails to operate abnormally, perform the following checks and correct them.

Failure phenomenon	Inspection matters
No water inlet	• There could be power failure.
	• Whether the water is stopped or the water pressure is too low
	• Has the water inlet pipe been installed and the faucet turned on
	• Is the filter on the water inlet valve clogged with dirt.
	• Whether the water inlet valve coil is damaged. (there is slight electromagnetic sound when the water inlet valve is energized, which is a normal phenomenon)
	• Is the (Start/Pause) button not pressed after the power switch is pressed.
No wash	• There could be power failure.
	• Whether the power supply voltage is too low.
	• Is the water intake at the desired level. (The washer will not work if the set water level is not reached).
Drainage abnormalities	• Whether the drain has been put down.
	• Whether the end of the drain pipe is submerged in water or sealed in the sewer.
	• Whether the rubber seal inside the drain valve seat is blocked by dirt.
	• Whether the drainage pipe is more than 15cm above the ground.
	• Whether the extension drain is longer than 3m or too thin in diameter.
Abnormal Drying	• Whether the door cover is closed or not.
	• Whether the clothes are crowded on one side of the barrel or the clothes are placed too much.
	• Whether the washing machine is placed unstably or tilted (uneven ground).
	• Is the motor belt too loose.



WARNING: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.



Compliance with E-waste Management Rules :

As per the Government of India's **E-Waste (Management) Rules, 2022)**

Gazette :G.S.R 801(E) 02/11/2022 (**As amended from time to time**)

under Environment protection Act 1986/29 end of life products Intended to be discarded should be channelized for dismantling and recycling through authorized dismantler and recycler only to ensure environmentally sound management of E waste. This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been manufactured with parts and materials that can be reused and are suitable for recycling. Do not dispose of the product with normal domestic and other wastes at the end of life. To facilitate return of End of Life product, visit our website www.onida.com for details or contact nearest authorized service center.

Machine Sl. No. : _____	
Model : _____	
Dealer's Name : _____	
Address : _____ _____ _____	
Date of Purchase : _____	
Date of Expiry : _____	
	Stamp of Dealer

Stamp of Dealer

Warranty Card for Onida Washing Machine

Customer Privileges.

WARRANTY

Standard warranty period 2 years

**Extended Warranty Period (applicable only on the parts mentioned below
8 years (only on motor))**

1. The warranty is confirmed only to the first purchase of the appliance and is non-transferable. This warranty card and purchase bill shall be presented to our staff at the time of service and the warranty shall be void if the warranty card is altered/tampered with or lost.
2. The warranty period (both standard Warranty Period and Extended Warranty Period) starts from the date of purchase of appliance and shall be available to products installed within municipal limits.
3. The warranty covers only manufacturing defect in material that may arise despite normal operation and usage of the appliance in accordance with the user manual.
4. Repairs, installations & removal of the appliance shall be got carried out only by an Authorized Service Personnel, failing which warranty will be void.
5. In the event of change of address and contact details, the new address and the new contact details shall be intimated to the Authorized Service Center on the given toll free number for ensuring proper installation. Charges shall be applicable and borne and paid by customer.
6. Repairs &/or replacement of parts covered under warranty would be purely at the sole discretion of the Company & Authorized Service center Head only.
7. In the event of a part covered under warranty / wash motor required to be repaired then our person's obligation will be to repair such part / wash motor to restore the product to working condition.
8. The company's obligation in respect of parts covered under warranty in event where repair is not possible shall be to provide replacement of defective parts with a functionally working condition.
9. It is hereby clarified that on expiry of Standard Warranty Period, visiting charges will be applicable for all visits and the same will be borne by the customer. In the Extended Warranty Period, in case the product needs to be transported to the Authorized Service Center for repair, the transportation charges from and to the place of installation shall be borne and paid by the customer.
10. The customer shall provide a reasonable, sufficient and safe working space to access the appliance for service. The customer is liable to move away all blocking objects or move the appliance to an appropriate location with electricity / gas / water supply and drainage for testing of the appliance.
11. In case of appliance requires to be repaired at service center, all expenses incurred in transportation of the appliance or parts thereof from and to the company's Authorized Service Center, as well as expenses incurred on deputation of service personnel/technician towards conveyance, inspection and other incidental expenses, will be borne and paid by the customer.
12. In case of repairs the replaced spare part will be warranted only for the unexpired period of the warranty.
13. The company shall be under no obligation or deemed to be in default or liable for cost, compensation, damage, penalty, fine, or otherwise on account of delay or failure in performance resulting from causes beyond its reasonable control (e.g. strikes, floods, earthquakes etc.) including but not limited to delay in servicing due to non-availability of spare parts and/or accessories.
14. The defective part shall belong to the company.
15. Warranty issued is subject to purchase from authorized dealers and repair by company's authorized service center only.
16. Dispute if any in respect of Warranty shall be subject to exclusive jurisdiction of Mumbai court irrespective of the point of sale.

Warranty is not applicable in any of the following cases :

1. If the warranty card is not duly filled and does not bear the stamp, date and signature of the authorized Dealer.
2. The warranty does not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly as a result of appliance failure, breakdown, or accident or usage of the Appliance not in accordance with the operating / user manual.
3. Warranty is not applicable on plastic parts, electrical parts, top, lid, assembly, control panel, window, knobs, nut, bolts, drain pipe, cabinet, dispenser assembly, drain hose, filter, castors, wheels, foot, drum, body of the washing machine and washer. The warranty does not cover consumables, normal wear & tear parts, plastic, glass and/or rubber parts, operational parts and accessories.
4. If the Appliance has been subjected to improper use such as operated on trolley other than the one, if any

Disposal & RoHS Declaration



This product is ROHS compliant

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device for environmentally safe recycling please use the collection systems or contact the brand help desk.

RoHS
COMPLIANT

ONIDA

Service

www.onida.com

Email: customer.care@onida.com

24x7 Customer Care No.

74 909 55 555

ONIDA

OWNER'S PRIDE

MARKETED BY :

MIRC ELECTRONICS LIMITED

ONIDA HOUSE, G-1, MIDC, MAHAKALI CAVES ROAD,
ANDHERI (EAST), MUMBAI 400 093

MADE IN INDIA
www.onida.com