 


ONIDA

androidtv



 works with the
Google Assistant

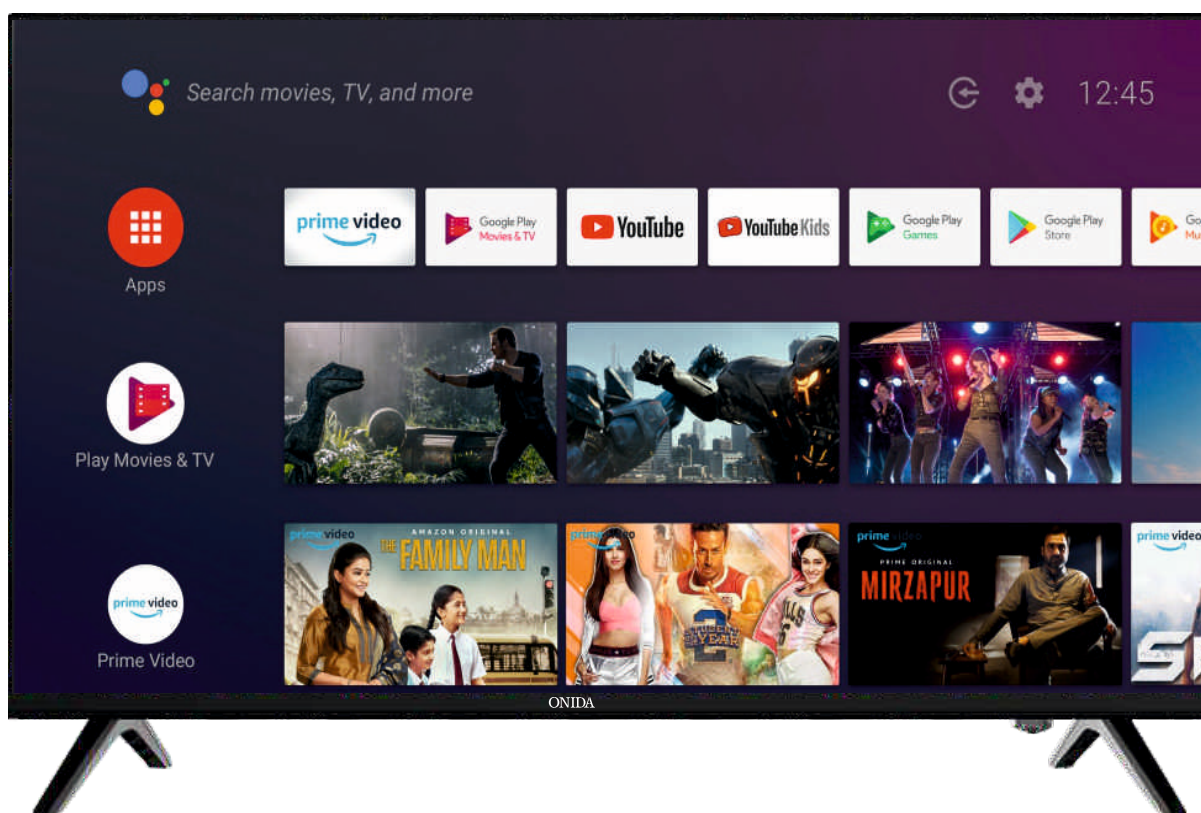

Instruction Manual

TABLE OF CONTENTS

Chapter 1	General Precaution and Safety For User	3 to 6
Chapter 2	Introduction	7 to 11
Chapter 3	Source Connectivity	12 o 16
Chapter 4	General Operation	17 o 18
Chapter 5	Initial Setup	19 to 27
Chapter 6	Introduction of Your Android TV Home Page	28
Chapter 7	How to operate your Android TV	29 to 34
Chapter 8	Customer Corner	35 to 36
Chapter 9	Warranty And Service	38 to 41

SAFETY :**PROPER TELEVISION PLACEMENT MATTERS**

- We are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions - new and old - must be supported on proper stands or installed

according to the manufacturer's recommendations. Televisions that are inappropriately placed on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

TUNE IN TO SAFETY

 
- ALWAYS follow the manufacturer's recommendations for the safe installation of your television.
- ALWAYS read and follow all instructions for proper use of your television.
- NEVER allow children to climb on or play on the television or the furniture on which the television is placed.
- NEVER place the television on furniture that can easily be used as steps, such as a chest of drawers.
- ALWAYS install the television where it cannot be pushed, pulled over or knocked down.
- ALWAYS route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed

WALL OR CEILING MOUNT YOUR TELEVISION

- ALWAYS contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- ALWAYS use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as VESA).
- ALWAYS follow all instructions supplied by the television and mount manufacturers.
- ALWAYS make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people are required for a wall or ceiling mount installation

MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- After purchase of flat panel television, many new television buyers move their older televisions into a secondary room. Special care should be made in the placement of older televisions.
- ALWAYS place your older television on furniture that is sturdy and appropriate for its size and weight.
- NEVER place your older television on a dresser where children may be tempted to use the drawers to climb.

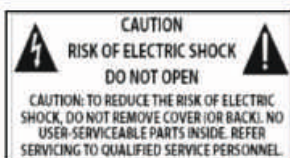**IMPORTANT SAFETY GUARD**

- ALWAYS make sure your older television does not hang over the edge of your furniture. The lightning flash with arrow head Symbol within an equilateral triangle is intended to alert the user to the Presence of uninsulated "hazardous Voltage" within the product's Enclosure, which may be of sufficient

Magnitude to induce a risk of electric Shock to persons. The exclamation point within an Equilateral triangle is intended to alert the user to the presence of Important operating and Maintenance

(servicing) instructions in the literature accompanying the appliance.

- 1) .Read these instruction's'.
- 2) Keep these instructions.
- 3) . Reed all warnings.
- 4) .Follow all instructions.
- 5) . Do not use this apparatus near water.
- 6) .Clean only with dry cloth.
- 7) .Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) .Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) .Protect the power cord from being walked on or pinched particularly at plugs, Convenience Receptacles, and the point where they exit from the Apparatus.
- 10).Only use attachments/accessories specified by the manufacturer.



- 11). When a cart is used, use caution, when moving the cart/apparatus combination to avoid injury from tip-over.
- 12).Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13). Refer all servicing to qualified service personnel. Servicing is required when the apparatus Been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14).The wall plug is the disconnecting device. The plug must remain readily operable.
- 15). Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.
- 16) . The apparatus should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on the apparatus.
- 17). Your TV has four VESA mounting holes on the back. If you attach a wall mount bracket to the back of your TV, the bracket must be securely attached using all four holes. If you do not use all four mounting holes, your TV may fall and cause property damage or personal injury. See the Documentation that came with your wall mount for complete mounting instructions.

Warning

Electric shock hazard

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No User-serviceable parts are inside. Refer servicing to qualified service technicians. Lightning For added protection for your TV during a Lightning storm, or when it is left unattended and Un-used for long periods of time, unplug it from the Power outlet and disconnect any antenna or cable System. This helps prevent property damage and Personal injury from lightning and power line surges.

Power lines

An outside antenna system should not be located in the Vicinity of overhead power lines or other electric light or Power circuits or where it can fall into such power lines or circuits. When installing an outside antenna system, take extreme care to keep from touching such powerlines or circuits as contact with them might be fatal.

Handling the LCD panel

- Your TV's screen is made of glass. Do not drop your T Vor hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water

Replacement parts

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other Hazards.

Safety check

After completing any service or repair to this device, ask the service technician to perform routine safety checks to determine that your TV is in correct operating condition.

Power source

Operate your TV only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult an electrician or your local power company.

Servicing

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric Shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

CAUTION

Damage requiring service

Unplug this TV from the power outlet and refer servicing to qualified service personnel under the following' condition

- When the power supply cord or plug is damaged or frayed
- If liquid has been spilled or objects have fallen into your TV.
- If your TV has been exposed to rain or water.
- If your TV does not operate normally by following the operating instructions. Adjust only those controls covered by the operating instructions because incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore your TV to its normal operation,
- If your TV has been dropped or damaged in anyway.
- When your TV exhibits a distinct change in performance

Outdoor antenna grounding

If an outside antenna or cable system is connected to your TV, make sure that the antenna or cable system is grounded to provide same protection against voltage surges and built up static charges Condensation Moisture Will form on the TV if the TV is brought from cool surroundings into a warm room or if the Temperature of the room rises suddenly. When this happens, the TV's performance may be impaired, To prevent this, let the TV stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually. Condensation may also form during the summer if the TV is exposed to the breeze from an air conditioner. In such cases, change the location of the TV.

Mobile telephone warning

To avoid interference with your TV picture and sound, operating problems, even damage, keep your Cordless and cellular telephones away from the TV

End Of life directives

Your TV may contain materials that are regulated for environmental reasons. Your TV also contains Materials that can be recycled and reused, To help protect the environment, contact your local authorities For information about disposal or recycling and about finding a recycler in your area before you dispose of your

DO not cover the Slots

The slots and opening on the cabinet and the back or bottom are provided for necessary ventilation. To ensure reliable operation of the TV, and to protect the TV from overheating, do not cover these slots with cloth or other materials

Do not block these openings by placing the TV on bed, sofa , rug or similar material.

Do not place the TV in confined spaces like bookcases, or built-in cabinets, unless proper ventilation provided

Note: The LCD/LED Panels have very high resolution pixels, more than three millions. The panels are sources from leading global suppliers and the specification of panel provides or up to 7 black pixels which are Within acceptable quality norm and does not constitute a defect. This does not affect the performance or reliability of the set. Hence does not warrant a replacement or any other compensation.

Trade Mark Information

Logos and trademarks used and mentioned in this manual belong to respective owners.

Manufactured under license from Dolby Laboratories.

Dolby , Dolby Audio, and the double-D symbol are trademarks Of Dolby Laboratories.

INTRODUCTION:

Thank you on your purchase of "ONIDA Android TV" . Your TV comes with the latest technology to enhance your TV experience.

WHAT'S IN THE BOX :


- | | |
|-----------------------|--------------------------|
| 1. LED TV | 6. Screws for wall mount |
| 2. Remote Control | 7. Concrete Plug(x2) |
| 3. Stand Left & Right | 8. Concrete Screws |
| 4. Screws for Stand | 9. Specification page. |
| 5. Wall mount | |

After Unpacking, please inspect your TV for damage. If you notice any damage please consult your Dealer
Accessories may not be placed all together. Take care not to throw them away unintentionally.

This product contains possibly dangerous parts (such as plastic bags), that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

Installing Batteries

 1. Push to open the back cover as illustrated.
2. Insert two AAA batteries according to the polarities marked on the battery case.
3. Replace the back cover as illustrated.

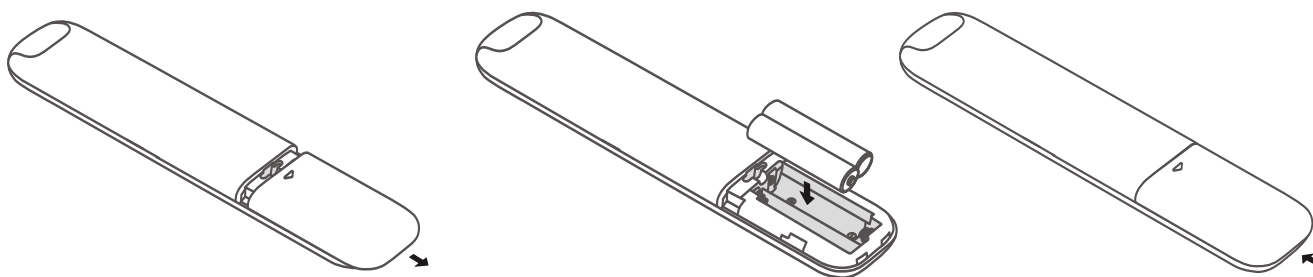

CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect type.

 
*For better reliability and longevity use "ALKALINE BATTERIES"

* **Batteries are not included with this TV set**

Buttons on the TV

Note: The location and names of the function buttons and power button on the TV may vary according to TV model.

And some buttons may not available for some models.

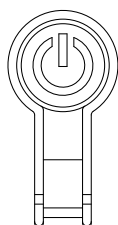

 button

To turn on and enter standby mode the user can press this  button

Remote Control Functions

Note:

- 1). The picture is only for reference.
- 2). Some buttons may not be available for some regions, some models Or some sources.
- 3). Some DTV-related buttons may not be applicable due to non-availability Of DTV signal in some areas.

Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

Note: Figures and illustrations in this operation manual are provided for reference only and may differ from actual product appearance. Certain functions may not be available for some models, e.g.



POWER 	(On/Off button) Turns the TV on or off.
MUTE 	To Mute and Un-mute the sound
NETFLIX	Goes to the NETFLIX homepage.
YouTube	Goes to the YouTube homepage.
Google Play	Goes to the Google Play homepage.
prime video	Goes to the prime video homepage.
Colour key 	Performs multiple operations which correspond to the operation guide displayed on the menu screen
BACK 	Exit the menu and return to the previous menu.
HOME 	Goes to the smart TV homepage.
^ v < > ^ v < >	(up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls.
OK	Confirms your selection.
SOURCE 	To enter source selection interface
MENU 	To access the options Menu
Volume  +/-	Increases or decreases the TV's volume.
Google Assistant 	(Mic) Click to interact with Google Assistant of the TV. (Available only when the network connection is normal.)
0~9 numeric key	Select the digital key number
TEXT	Special function key
LIST	Press to display the channel list



How to Pair Remote Control with the TV

This is a Bluetooth remote control, and before using it, please pair it with the TV firstly. The following steps are for your reference:

Step 1: Press  button to enter the home page.

Step 2: Press  button to enter the "RC pairing"

 
 
 
Step 3: Follow the "Settings tips page", Press **OK** and + **volume** together.

Step 4: The screen will display "Pairing...", Pair finished the screen will display "Success!".

NOTE: If you wait more than 2 minutes and it can't pair, please repeat the above steps for pairing again.

Press [Menu] + [Return] keys at the same time for more than 5 seconds to cancel Bluetooth pairing.

INPUT/OUTPUT SOURCE DESCRIPTION

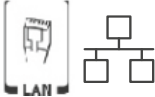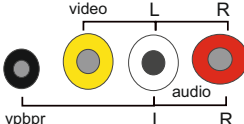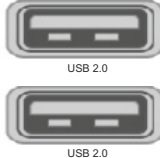Input/output Source image	Description	Function
	ETHERNET/RJ45	Plug for connecting to external modem or network access equipment. connect an ethernet cable to this jack.
	 HEADPHONE OUT	HEADPHONE OUT Socket(output) Allow you to connect earphones to listen to the sound coming from the TV <i>Note: Excessive sound pressure from earphones can cause hearing loss</i>
	OPTICAL AUDIO OUT OR DIGITAL AUDIO OUT	Connect a sound bar, digital audio system or home theatre System to this jack to listen to TV audio through external speaker.
	AV IN /COMPONENT YPBPR/→ VIDEO → L → AUDIO R →	Connect the video and audio for an AV device like (setup box, blue ray, DVD, Camcorder etc..) to these jack. setup box to TV set and connection for Blue ray or DVD with TV set
	HDMI 1,HDMI 2,HDMI 3 (High definition multi media interface)	Socket can be use to a PC with a compatible video card installed certain DVD player or Blue ray or a high-definition compatible digital satellite decoder. this socket provide an uncompressed digital connection that carries video and audio data by way Of an integrated mini plug cable. for connection
	HDMI 2/ARC Audio return channel	HDMI 1 is supported ARC(Audio return channel) function. connect an ARC-enabled home theater receiver to this jack
	USB (MULTI MEDIA PLAYER)	These socket can be used to connect an USB device like (flash drive to view compatible audio, video and picture files
	TV ANTENNA IN	Connect an antenna coaxial cable to this socket(jack)

Note: The location and names of the sockets on the TV may vary according to TV model, and not all sockets available on all models.

CAUTIONS: • Check the jacks for Position and type before making any connections.

- Loose connections can cause poor audio or video quality. Make sure that all connections are tight and secure
- The external audio/video equipment shown may be different from your equipment. If you have questions, refer to the documentation that came along with your equipment.
- Always unplug the power cord when connecting external equipment.

Note : Graphics contained within this publication are for presentation on.

INSTALLATION

Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer.

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

Attaching the stand

Step 1

 
Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right.

Step 2

Align the stand leg to the installation point, as illustrated below


Step 3


Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right.

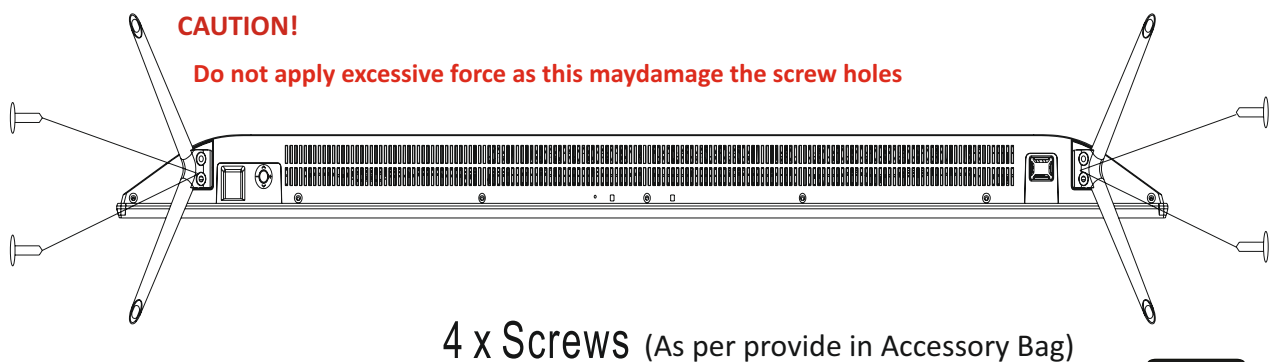

CONTROLS AND CONNECTIONS

  1. OPTICAL/SPDIF
2. RJ45 (ETHERNET)
3. ANTENNA (RF)
4. YPBPR
5. VIDEO IN
6. AUDIO IN L
7. AUDIO IN R
8. HDMI3
9. HDMI 2 / ARC
10. HDMI 1
11. USB INPUT
12. HEADPHONE PORT

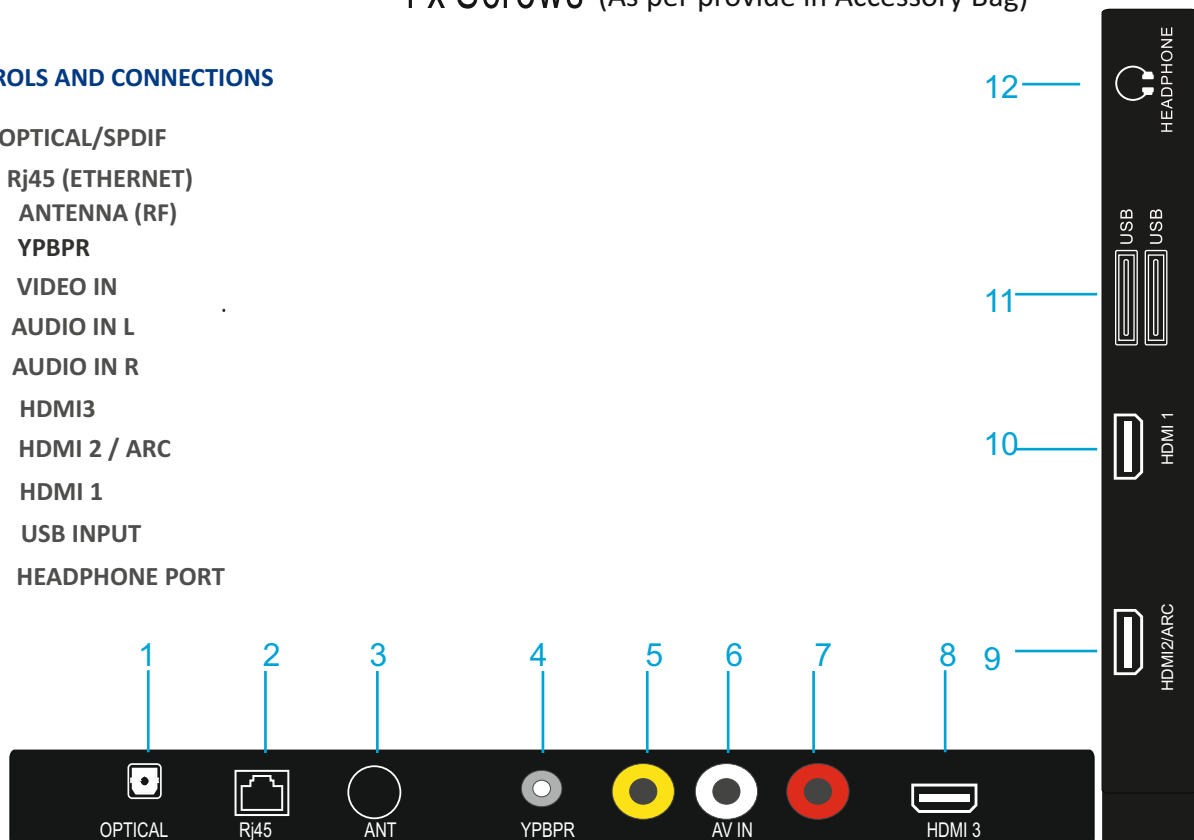

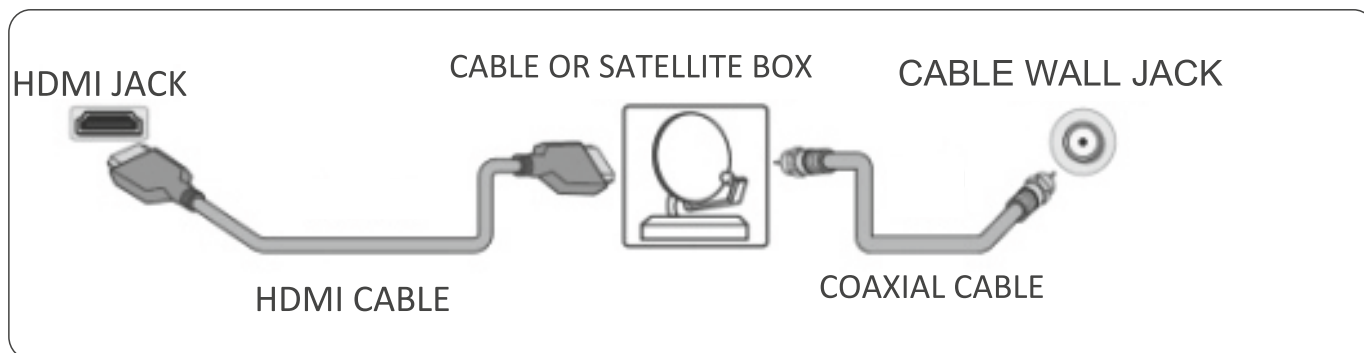


Connecting a Cable or set Top box or DTH.

Many cable or STB TV boxes have more than one connection type. To get the best video, you should use the best connection type available. You can connect a cable or STB /DTH using (in order of preference)

- 1.) Make sure that your TV's power cord is unplugged and all connected equipment is turned Off.
- 2.) Connect a coaxial cable (not provided) to the cable wall jack and to the cable -in jack on the cable or STB.
- 3.) Connect an HDMI cable (not provided) to one of the HDMI jacks on your TV and to the HDMI out jack on the cable or STB/DTH box
- 4.) On the HOME screen, navigate to the INPUTS row, then select HDMI 1 ,HDMI 2 or HDMI 3

 Note: An HDMI cable carries both audio and video. You do not need to use separate audio cables

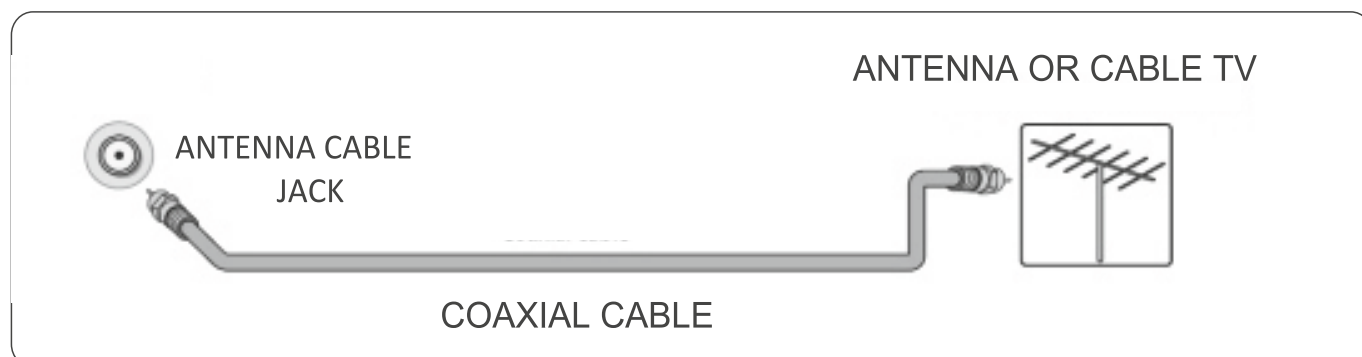

Connecting An Antenna :1.) Make sure that your TV's power cord is unplugged and all connected equipment is turned off.

- 2.) Connect a coaxial cable (not provided) to the antenna/ cable jack on your TV and to the antenna or cable connection.
- 3.) Plug your TV's power cord into a power outlet, then turn on your TV.
- 4.) On the HOME screen, navigate to the INPUTS row, then select Antenna.

 
Note: • use a coaxial cable to eliminate interference and noise from radio waves.

- If the antenna is not installed correctly, contact qualified service personnel to correct the problem.
- If the signal level for a channel is weak, the picture may be distorted. Adjust the antenna or use a highly directional outdoor or set top Antenna with a built in amplifier.
- If the picture quality is good on some channels and poor on others, the problem may be caused by a poor or weak signal from the Broadcaster or cable TV provider.
- If you connect to cable TV without a set top box and experience poor picture quality, you may need to install a set top box to improve Signal reception and picture quality. Contact your cable TV provider about upgrading to a set top box.

AV/COMPOSITE :

Note: Cables are often color-coded to match color-coded jacks

- 1.) Make sure that your TV's power cord is unplugged and all connected equipment is turned Off.
- 2.) Connect a coaxial cable (not provided) to the cable wall jack and to the cable-in jack on the cable or STB box
3. Connect an AV cable (not provided) to the AV/Composite jacks on your TV and to the AV out jacks on the cable or STB box.

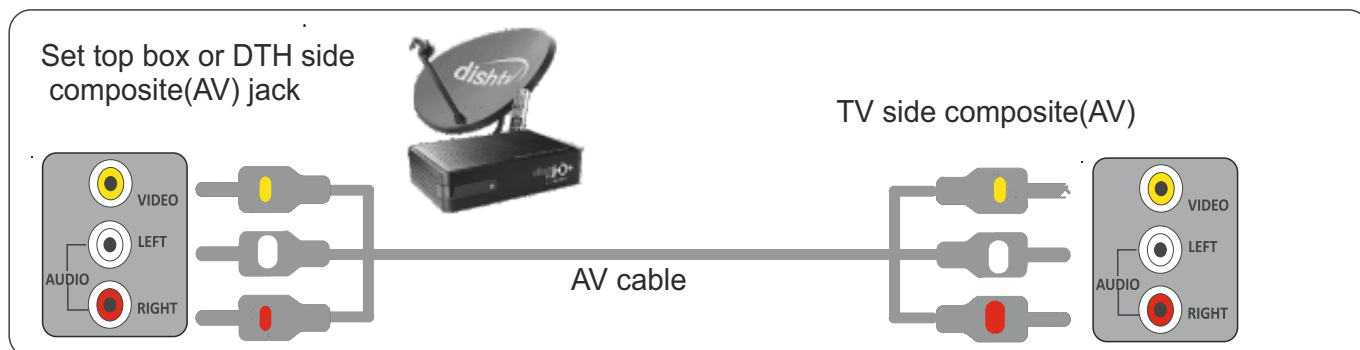

IMPORTANT: When you connect the audio using the AV jacks, the signals are analog

4 .Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or STB/DTH box

5 .On the HOME screen, navigate to the INPUTS row, then select Composite

 
Connecting a VD or Blue ray player.

Many DVD or Blue-ray players have more than one connection type. To get the best video, you should use the best connection type available.

You can connect a DVD or Blue-ray player using. *HDMI *AV/Composite

1.) Make sure that your TV's power cord is unplugged and the DVD or Blue ray player is turned off.

2.) Connect an HDMI cable (not provided) to one of the HDMI jacks on your TV and to the HDMI out jack on the DVD or Blue-ray player.

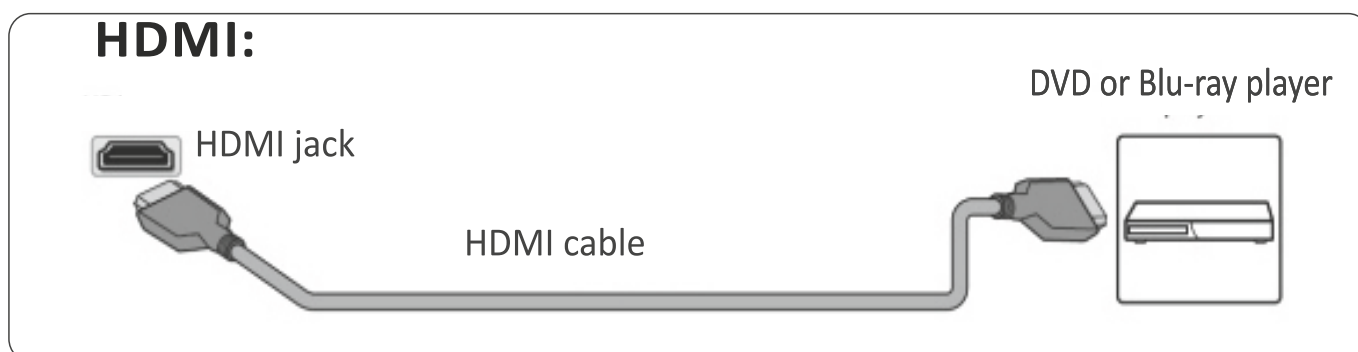

3.)plug your TV's power cord into a power Outlet, then turn on your TV and DVD or Blue-ray player.

 
4.) On the HOME screen, navigate to the INPUTS row, then select HDMI 1,HDMI 2 or HDMI 3 (optional)

Note: An HDMI cable carries both audio and video. You do not need to use any separate audio cables

AV/Composite :

Note: Cables are often color-coded to match color-coded jacks

1. Make sure that your TV's power cord is unplugged and the DVD or Blue-ray player is

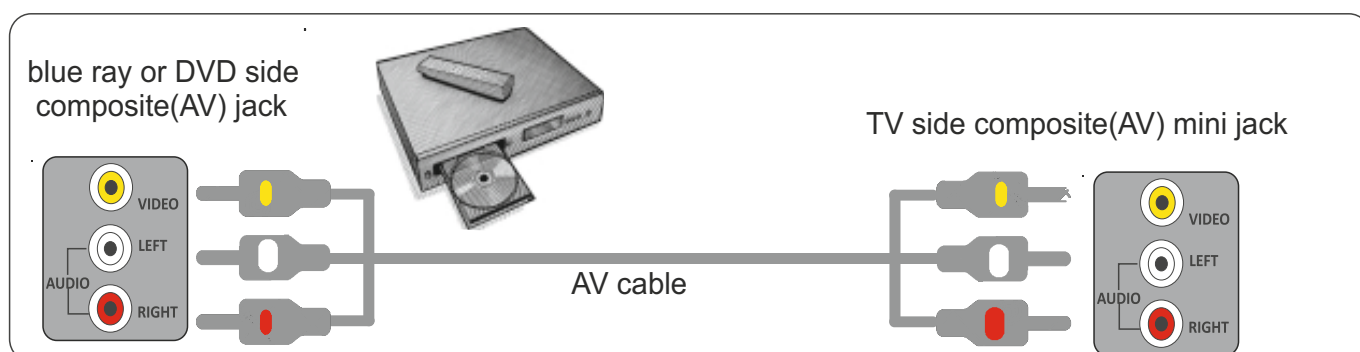

2. Connect an AV cable (not provided) to the AV jacks on your TV and to the AV out jacks on the DVD or Blue ray player.

 
IMPORTANT : When you connect the audio using the AV jacks, the signals are analog

3. Plug your TV's power cord into a power outlet, then turn on your TV and DVD or Blu-ray player.

4. If needed, set the player to the correct output mode. See the documentation that came along with the player.

5. On the HOME screen, navigate to the INPUTS row, then select Composite.


Connecting to Ethernet / RJ45 :

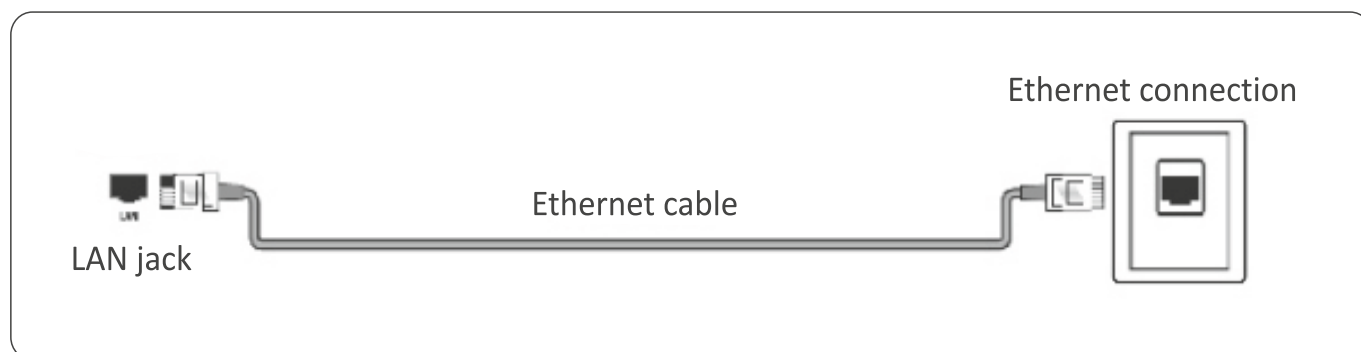

To access the Internet, you can connect to a LAN (Ethernet) network. If you do not want to connect to Wi-Fi.

- Connect an Ethernet cable (not provided) to the LAN jack on your TV and to your Ethernet

 Connecting a Computer :

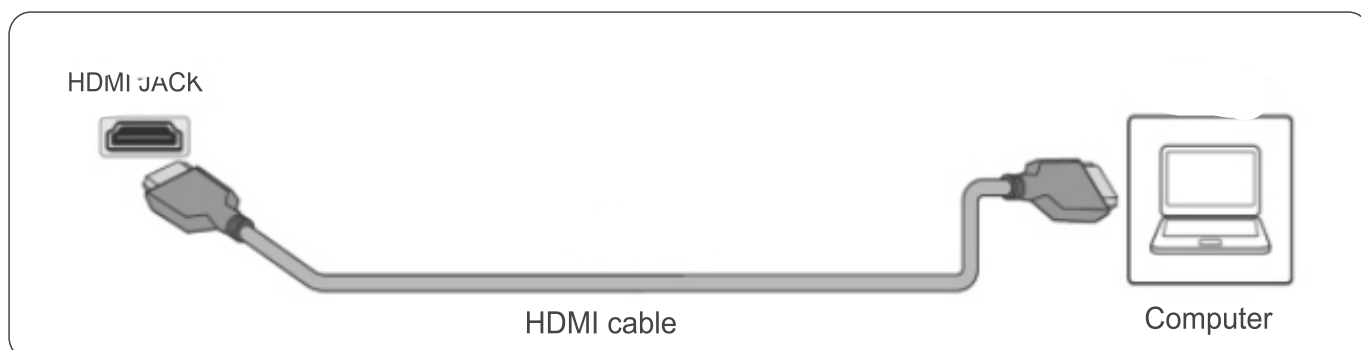

1.) Make Sure that your TV's power cord is unplugged and the computer is turned Off.

2.) Connect an HDMI cable (not provided) to one of the HDMI jacks on your TV and to the HDMI out jack on the computer.

3.) plug your TV's power cord into a power outlet, then turn on your TV and the computer.

4.) On the HOME screen, navigate to the INPUTS row, then select HDMI 1, HDMI 2, HDMI 3 (OPTIONAL)

Connecting External Speaker or a Sound bar :

You can connect external speakers or a sound bar using: * Digital audio * Analog audio

 
1.) Make sure that your TV power cord is unplugged & the digital speaker system or sound bar is turned off.

2.) Connect a SPDIF audio cable (not provided) to the SPDIF output jack on your TV and to the audio in jack on the digital speaker system or sound bar.

3.) Plug your TV's power cord into a power outlet, then turn on your TV.

4.) Turn on the digital speaker system or sound bar, then set it to the correct source. See the documentation that came along with the digital speaker system or sound bar

Note: Depending on the audio device you are connecting, you may need to change the digital audio format for your TV. The default setting is Auto

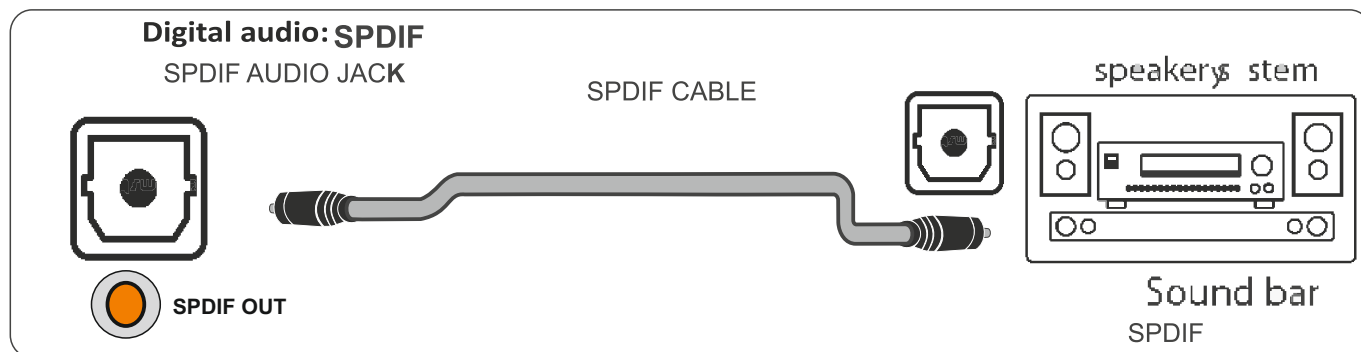


5.) If you need to change the digital audio format, go to the Home menu, select Settings, then select Display & Sounds, then Select Audio Output, then select Digital Audio Format and change the setting to PCM or Dolby Digital.

6.) If you want to turn off your TV speakers, go to the Home menu, select Settings, then select Display & Sounds. Select Audio Output, then select TV Speakers and change the setting to OFF.

Connecting a USB flash drive

 Plug a USB flash drive into the USB port on your TV. It takes few seconds for detecting flash drive. "Content loading" message will be seen on TV screen, after detecting flash drive, on TV you will see four options.

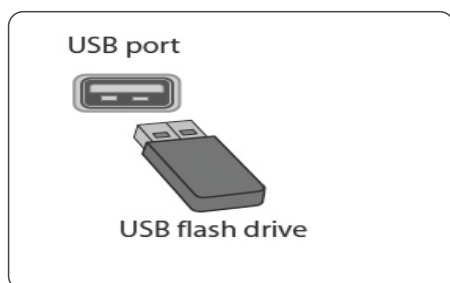

1) Your Files: for all content are visible,

2) Video: only compatible Video content play

3) Image: only compatible image file format play

 
4) Audio: only compatible Audio format play

To safely remove USB storage, you need to "eject" it from your Amazon Fire TV first:

Digital audio using the HDMI/ARC: (Optional)

Your TV can send sound to an ARC device, like an AV receiver, to create a home theater that uses two or more speakers. When you connect external speakers or a sound bar, sound plays through your TV speakers and the external speakers or sound bar.

1.) Make sure that your TV's power cord is unplugged and the digital speaker system or sound bar is turned off.

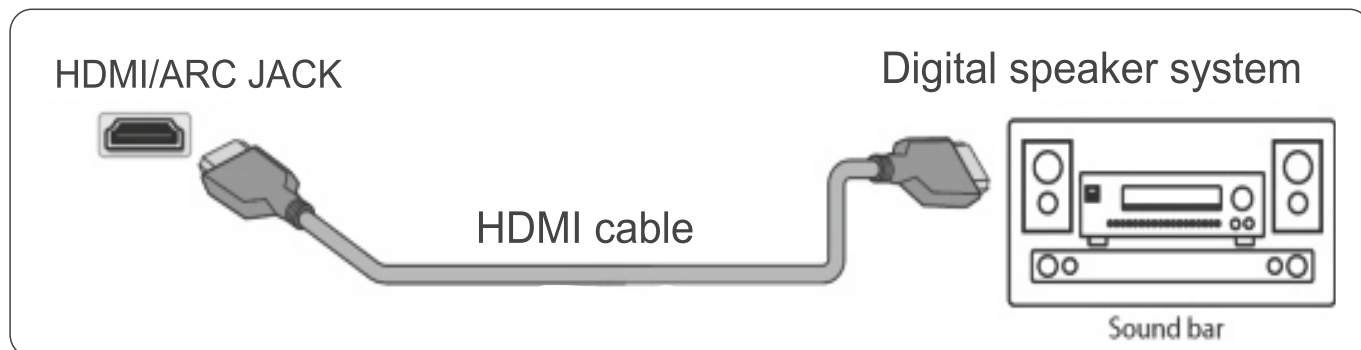

2.) Connect an HDMI cable (not provided) to the HDMI 2/Arc jack on your TV and to the audio in jack on the digital speaker system or sound bar.

3.) Plug your TV's power cord into a power outlet, then turn on your TV.

4.) Turn on the digital speaker system or sound bar, then set it to the correct source. See the documentation that came along with the digital speaker system or sound bar.

Note: Depending on the audio device you are connection, you may need to change the digital audio format for your TV. The default setting is Auto.

5.) If you need to change the digital audio format, go to the Home menu, select Settings, then select Display & Sounds, then Select Audio Output, then select Digital Audio Format and change the setting to PCM or Dolby Digital.

6. If you want to turn off your TV speakers, go the Home menu, select Seettings, then select Display & Sounds. Select Audio Output, then select TV Speakers and change the setting to OFF.

CAUTION:

- Your TV should only be operated from the power source indicated on the label.
- Always unplug the power cord from the power outlet when you will not be using your TV for an extended period of time.

Switching On

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two batteries in the remote control.

Precautions on using batteries

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable **FIRST** to the television, **THEN** to a mains socket.

(Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)

If your TV is connected to an AC supply

Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

If your TV is connected to a DC supply

Your TV set should only be connected to a DC supply. It must not be connected to a AC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.

4. When powered on, the TV will be turned on directly or be in standby.

Note: For some models, switch the TV on by pressing the power button.

If the power indicator lights up, the TV set is in standby mode. Press the  button on the remote control or on the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the (button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.

To switch off the TV set, unplug the mains socket from the mains outlet.

Note: For some models, press the power button to switch off the TV set.

Your TV will require an internet connection to operate all functions. data usage charges may apply.

Please refer to your Internet Service Provider (ISP) for additional information

To access the internet, you must subscribe high speed broadband internet service from your internet service provider.

Your TV can be connected to your home network in two ways:

- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless or external wireless USB adapter and your home wireless network.

Note: The following instructions are just the usual ways to connect your TV to the wired or wireless network

The connection method may be different depending on your actual network configuration. if you have any questions about your home network, please refer to your ISP(Internet Service Provider).

Connecting to a wired network

 
To connect to a wired network:

1. Ensure you have.

- An Ethernet cable long enough to reach your TV
- A router or modem with an available Ethernet port
- A high-speed internet connection
- An **Ethernet (LAN)** port on the back of the TV

2. Connect your Ethernet cable to the router and to the **Ethernet port** on the back of the TV.

3. Use the **Network Settings** to configure the TV

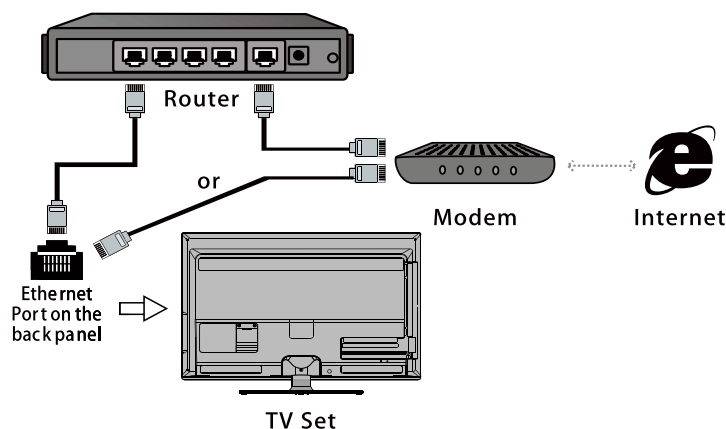

Built-in wireless connection

Connecting to a wireless network

To connect to a wireless network

1. Ensure you have:

- A router broadcasting a high-speed wireless signal
- A high-speed internet connection

2. Use the Network Settings to configure the TV

Note: Some models may have no internal wireless module, you can use wireless network by inserting external wireless adapter into USB socket of the TV. Some external wireless adapters can't be compatible with the TV.

Initial setup

The first time you switch the set on, the Initial setup screen appears, which guides you through the initial setup process.

 
Follow the on-screen instructions to finish the initial setup process such as selecting the language ,connecting to the network, scanning channels, and more. During each step, either make a choice or skip the step. If you skip a step, you can perform the setup later from the settings menu.

Note: If the channel search retrieved only the analogue channels it could be caused by poor broadcasting and therefore is not covered by manufacturer warranty. Manufacturers cannot be held responsible for lack of or poor broadcasting in some areas.



INITIAL SETUP

For the first initial setup, on screen setup wizard will guide you through setting your TV. Please follow according to onscreen guide to setup your TV correctly.


When you switch on the TV for the first time, the First Time Setup menu will be displayed on the screen, as illustrated below.

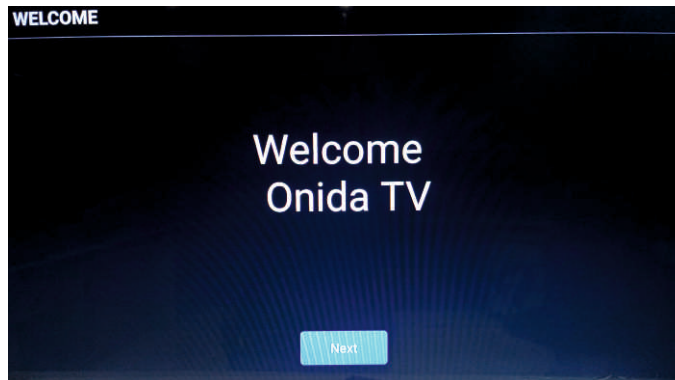

  Be sure to follow the below prompts to pair your Bluetooth remote control. After the pairing is successful, you can now operate the TV.

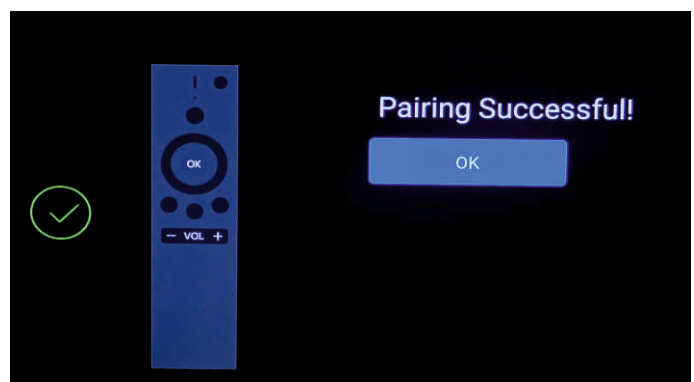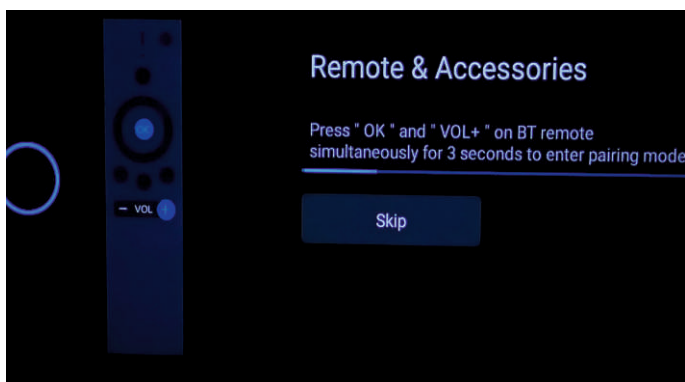

 This function is used for pairing remote with TV. Press <OK> and <volume up> button for 5 seconds to pair remote. After pairing, you can use your Bluetooth remote control to operate the TV.

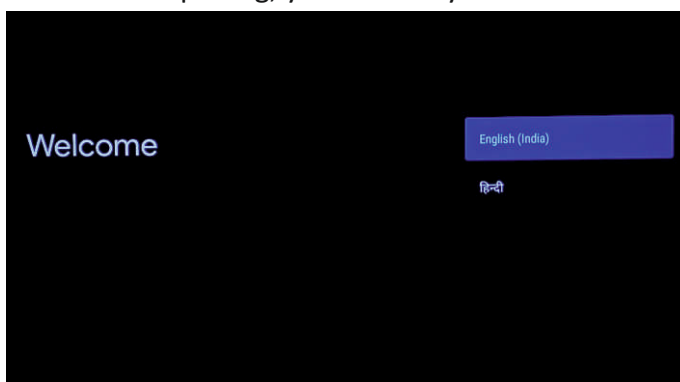

To set up your new TV, first, select your preferred Language.

 
Press ▲ / ▼ to select the system language and press OK to confirm the language.

You can then proceed with standard setup or choose to set up with your phone/tablet depending on your preference.


Setting up the TV with a Android phone

If you would like to set up your device using a tablet or phone, locate the Google App on your handset or tablet. Alternately, you can skip to WiFi Connection.

INITIAL SETUP (CONT.)

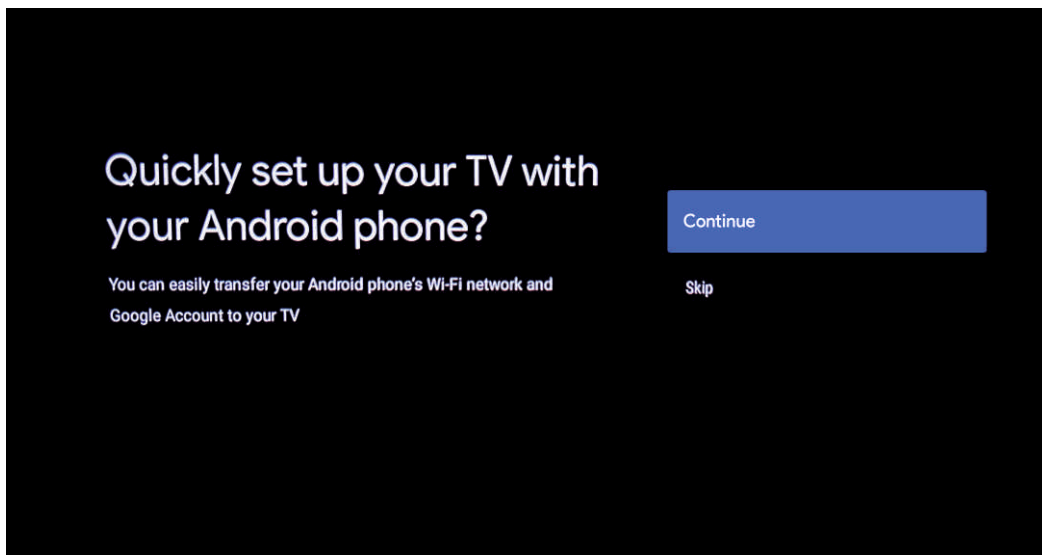


 Follow the prompts to locate your device.

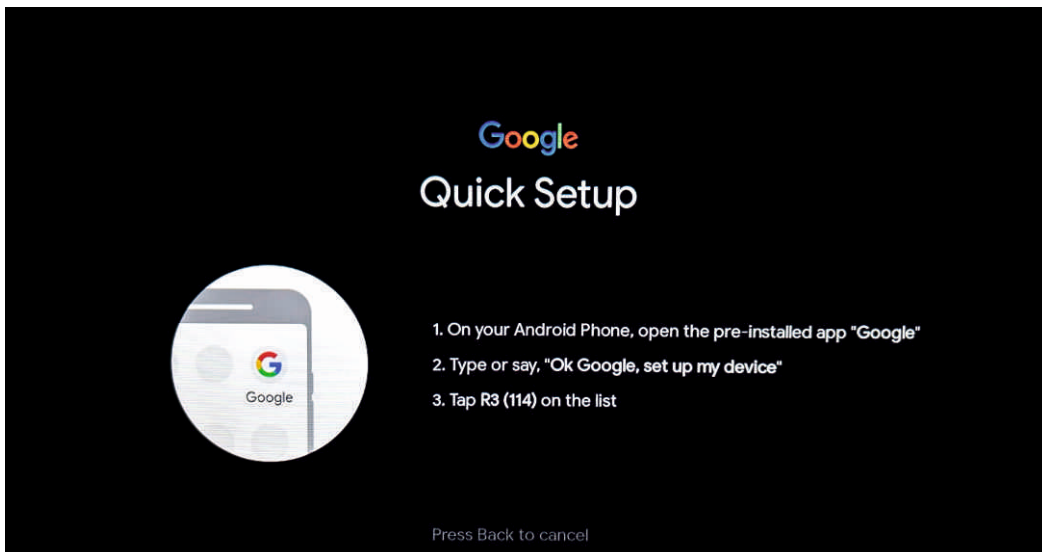



WiFi Connection and Google account.

 If you would like to set up the unit using your remote rather than a tablet or phone, you will be prompted to connect to a WiFi network. Navigate to the name of your Wireless Network from the options:

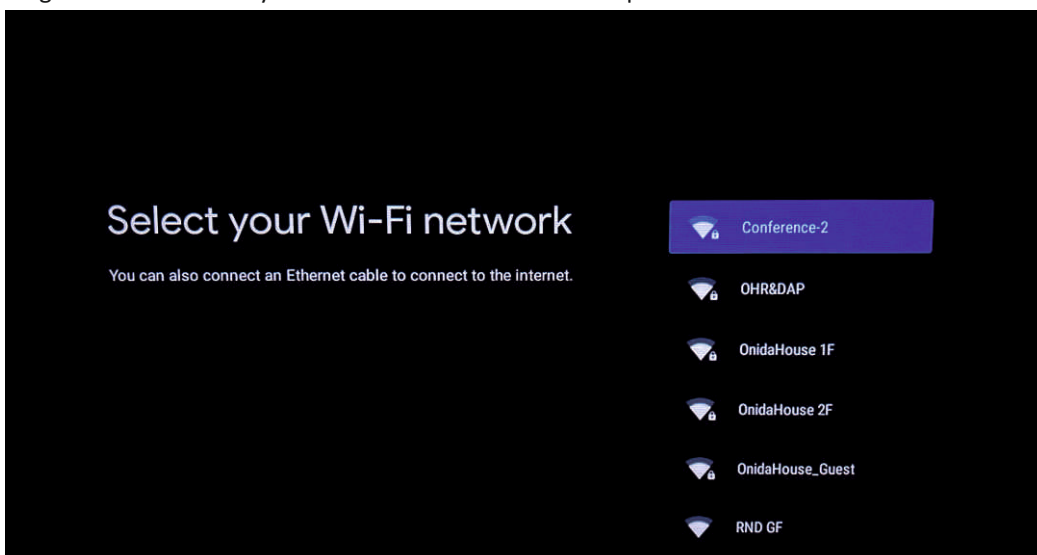

INITIAL SETUP (CONT.)

  Input the user name and password for your Wireless Network, and if the credentials are correct, after a few seconds your TV will be connected.

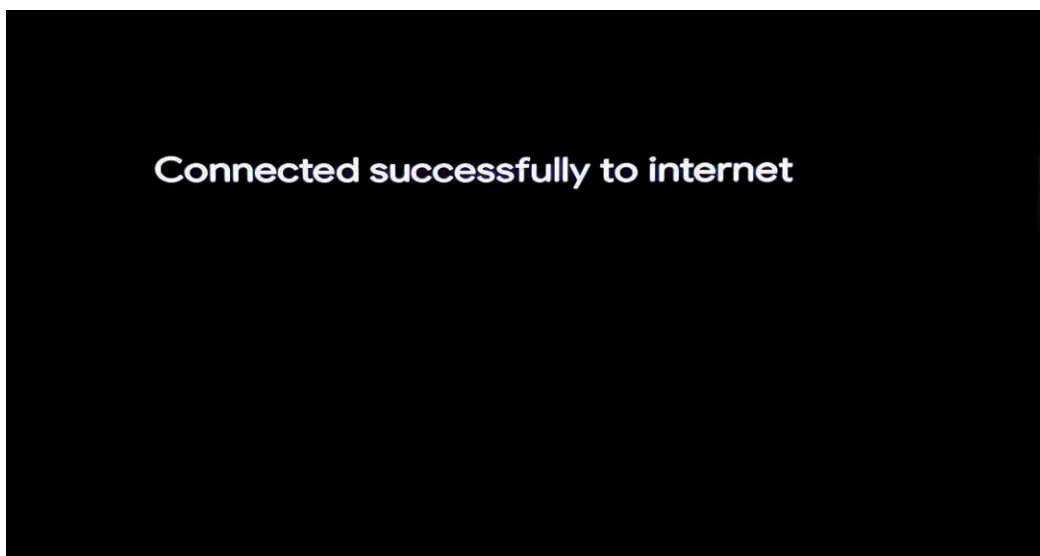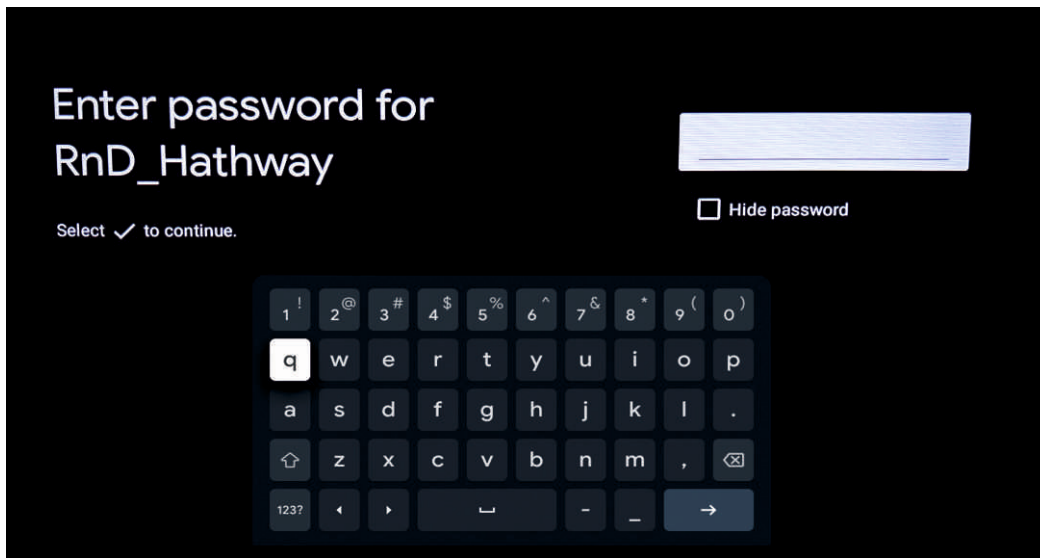

Next, link the TV to your Google account to get the most out of your TV.

You can add your account using a phone or computer, or your remote.

 
If you choose to use an external device to connect, you will be prompted to use a code on an external device

If you do not wish to use a tablet or computer, you can certainly set up the unit using the remote directly:


You will be prompted to read and accept Google's Terms of Service

Providing access to your location allows some apps to function better, and provide localised content, but the TV will still function if you would rather decline


INITIAL SETUP (CONT.)

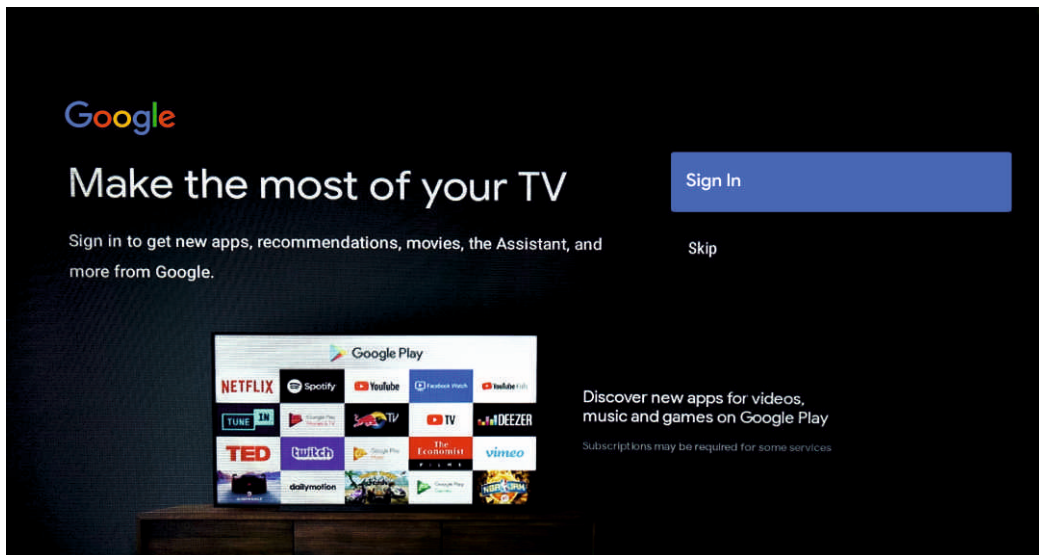

 
You will be Sign in the your Google's account:

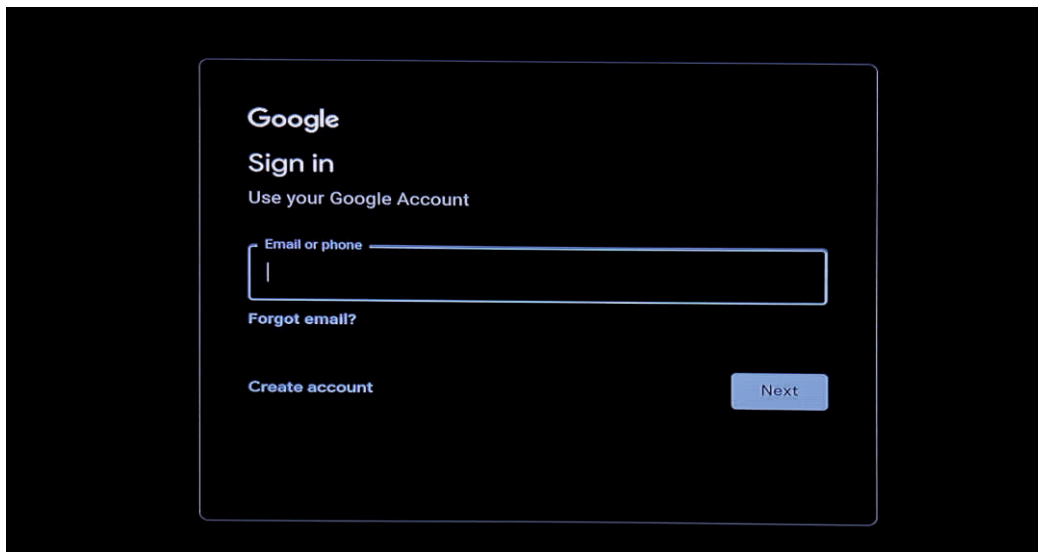The image shows the Google Sign in screen. It has a white background with the Google logo at the top. Below the logo, it says "Sign in" and "Use your Google Account". There is a text input field labeled "Email or phone" with a cursor inside. Below the input field, there is a link "Forgot email?". At the bottom left, there is a link "Create account". At the bottom right, there is a blue "Next" button.


 
You will be enter the your Google's account password

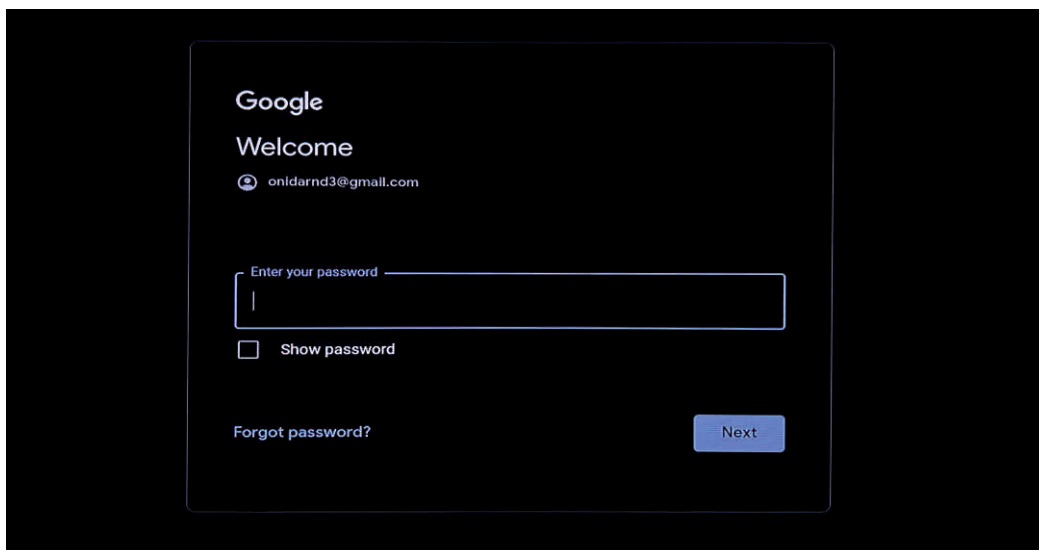The image shows the Google Welcome screen. It has a white background with the Google logo at the top. Below the logo, it says "Welcome" and "onldarnd3@gmail.com". There is a text input field labeled "Enter your password" with a cursor inside. Below the input field, there is a checkbox labeled "Show password". At the bottom left, there is a link "Forgot password?". At the bottom right, there is a blue "Next" button.


 
INITIAL SETUP (CONT.)

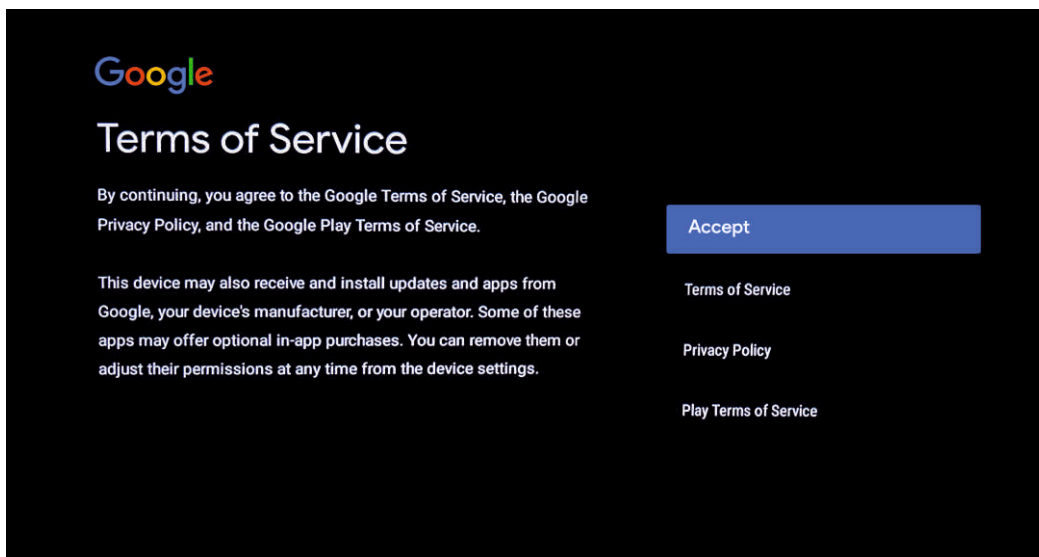

  
You will be prompted to read and accept Google's Terms of Service:

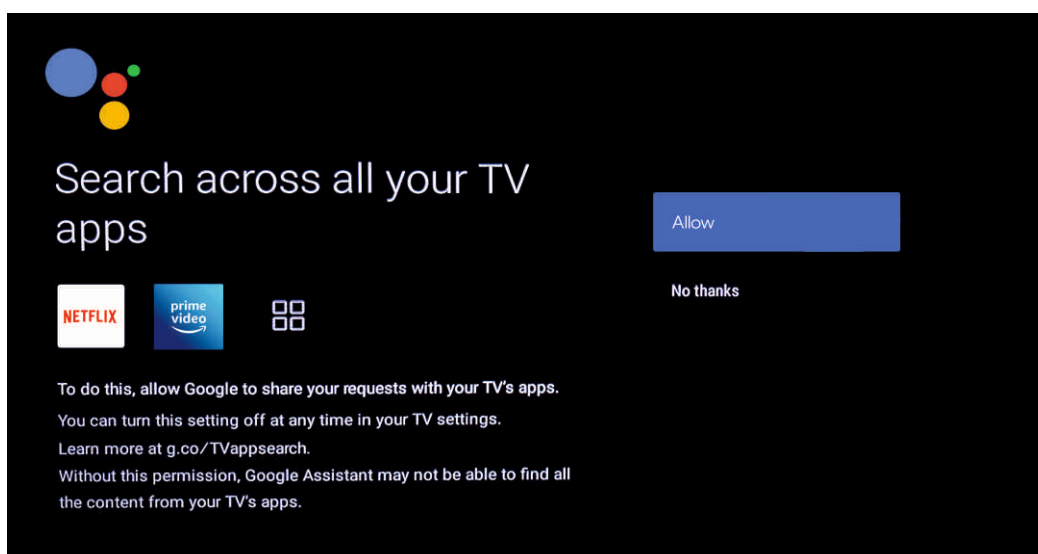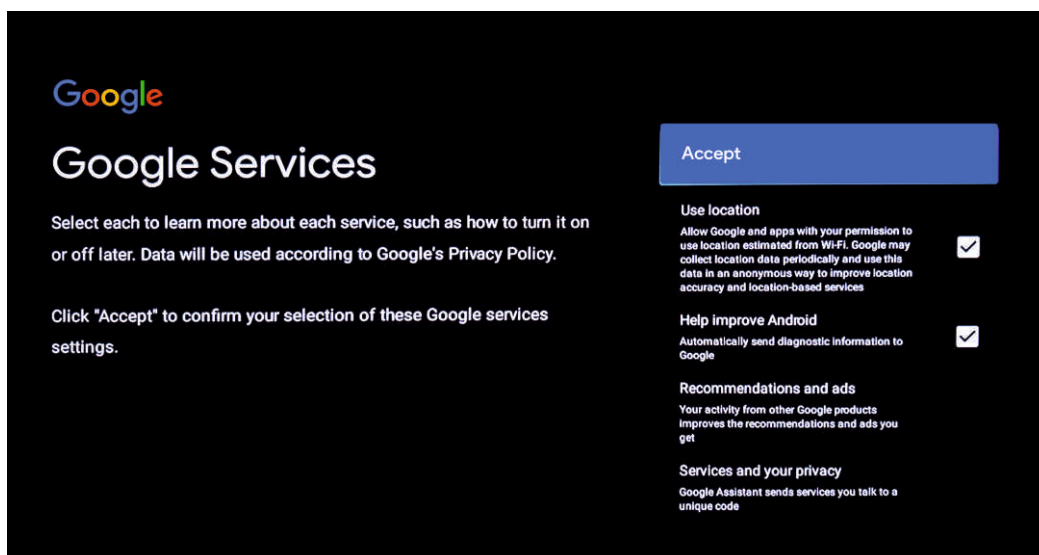



INITIAL SETUP (CONT.)

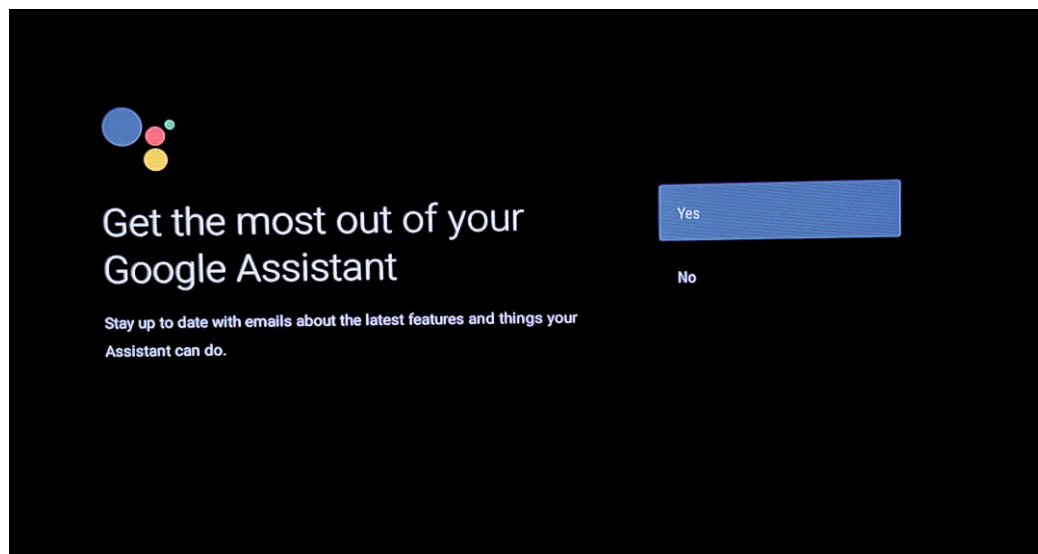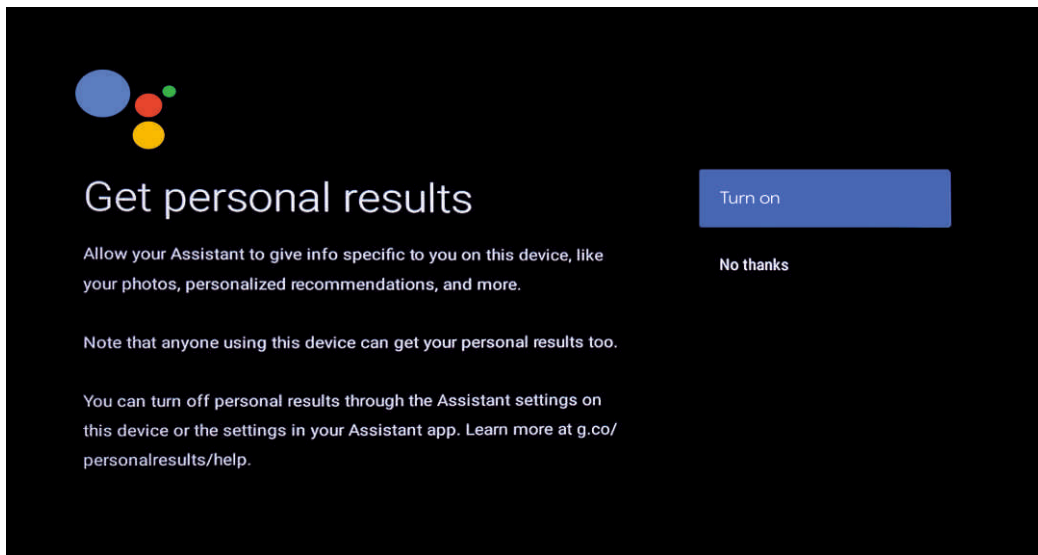  

 
Informational screens will now appear, you can scroll through steps by press "RIGHT" directional button to continue

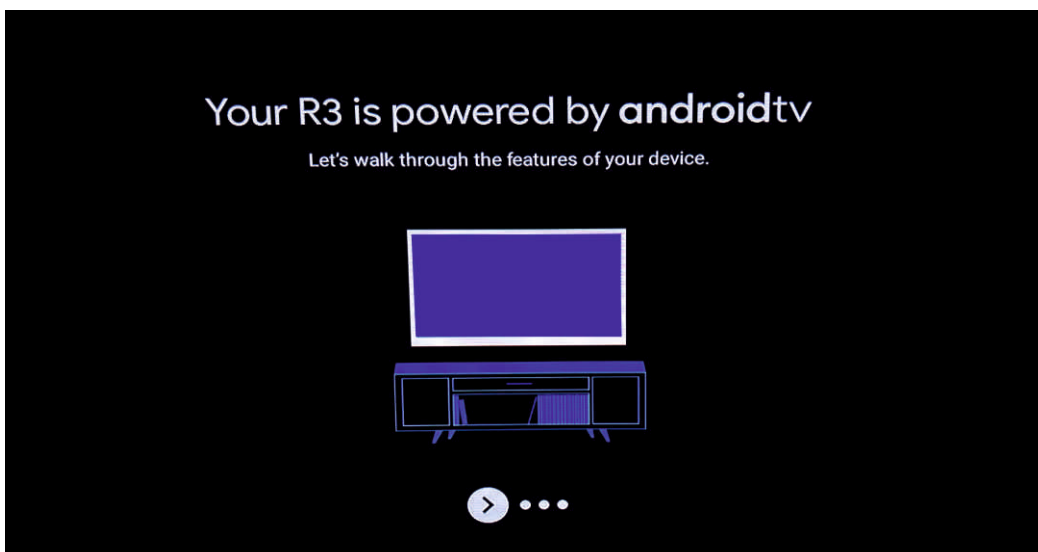


INITIAL SETUP (CONT.)

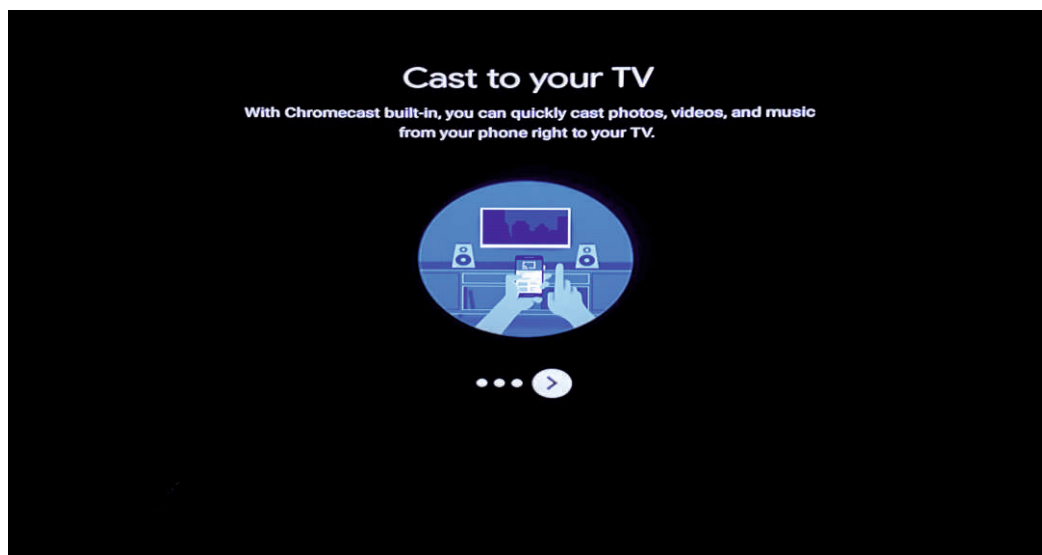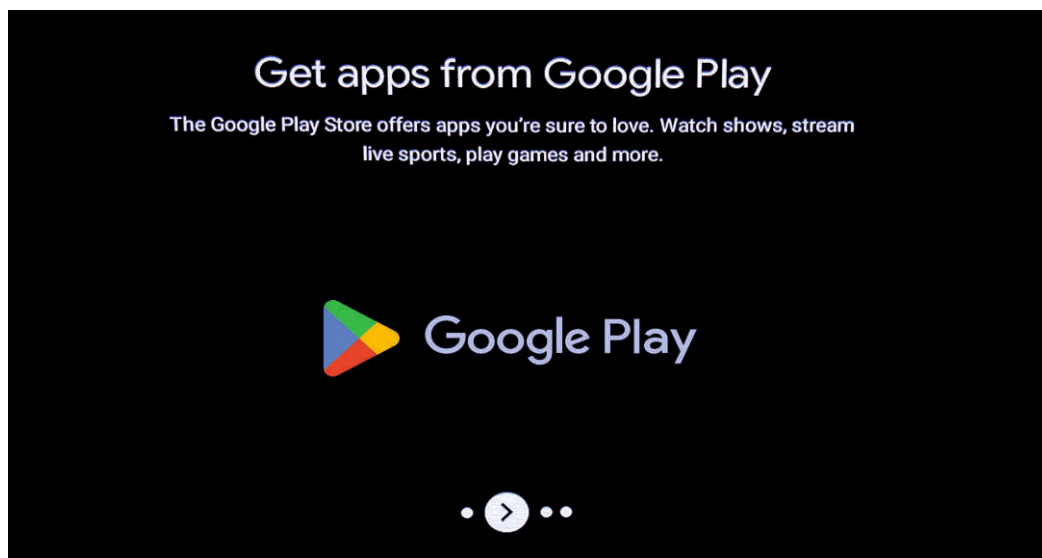  

 
Please be sure in this step, select "HOME" if you are using this TV for use at home. Make sure to confirm once you have selected "HOME"

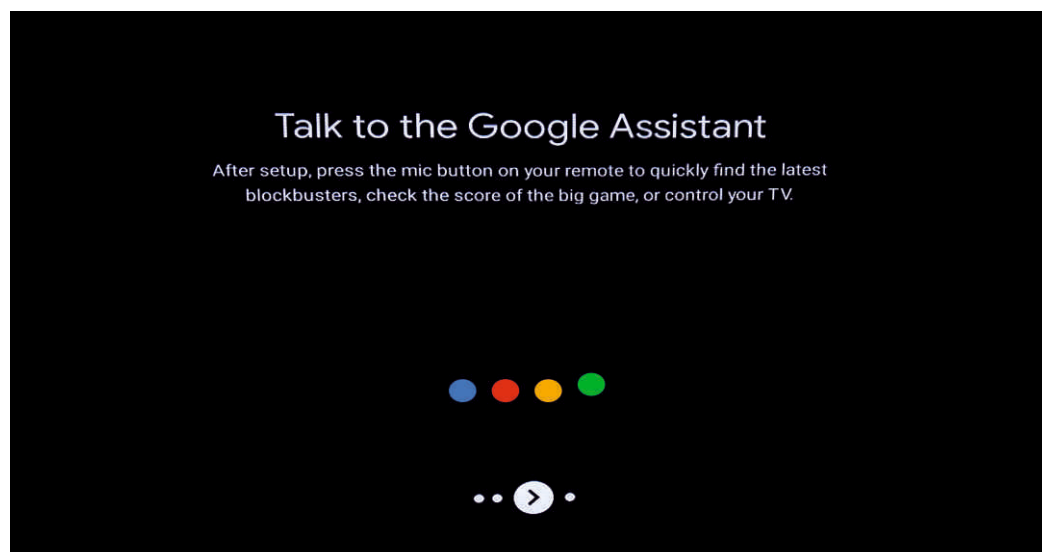


INITIAL SETUP (CONT.)

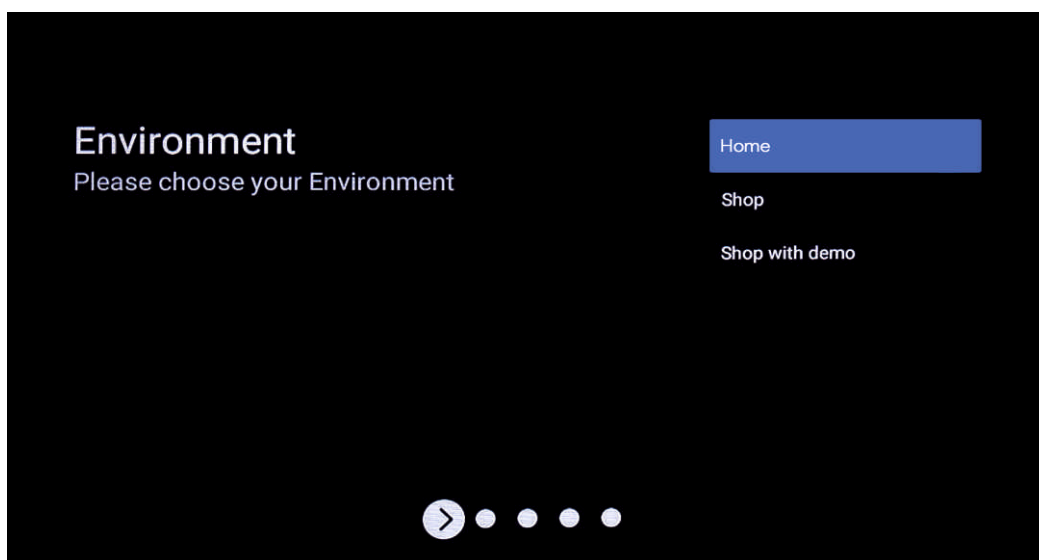 


 
Select the country you are using the device in with the directional buttons.

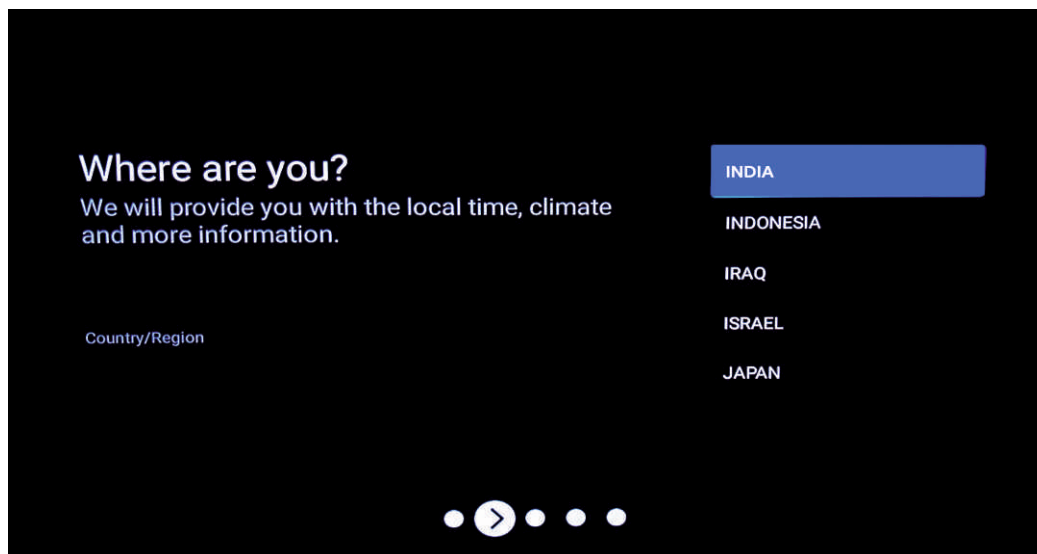

 Make sure to select "SCAN" to auto tune your TV to search for local ATV channels

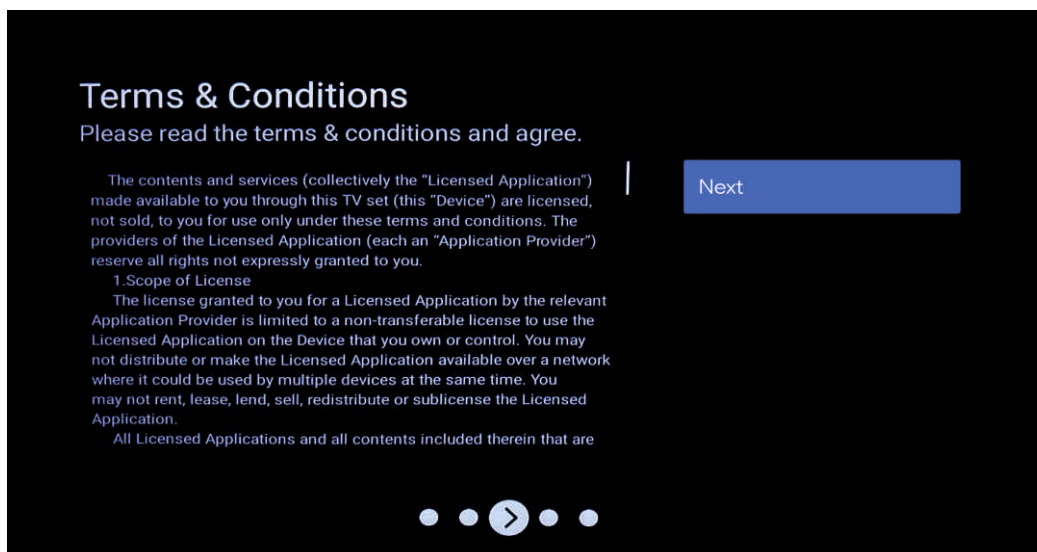


INITIAL SETUP (CONT.)

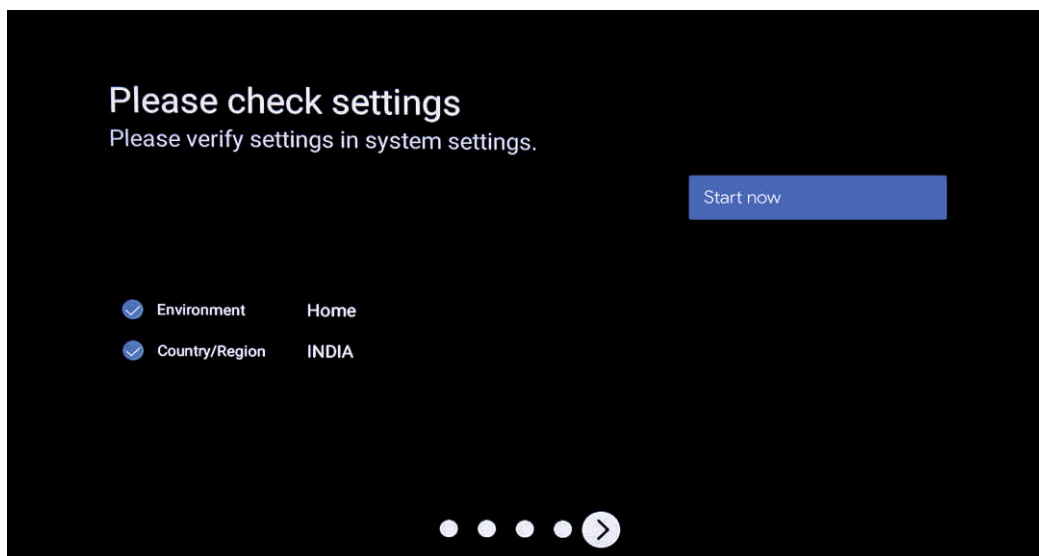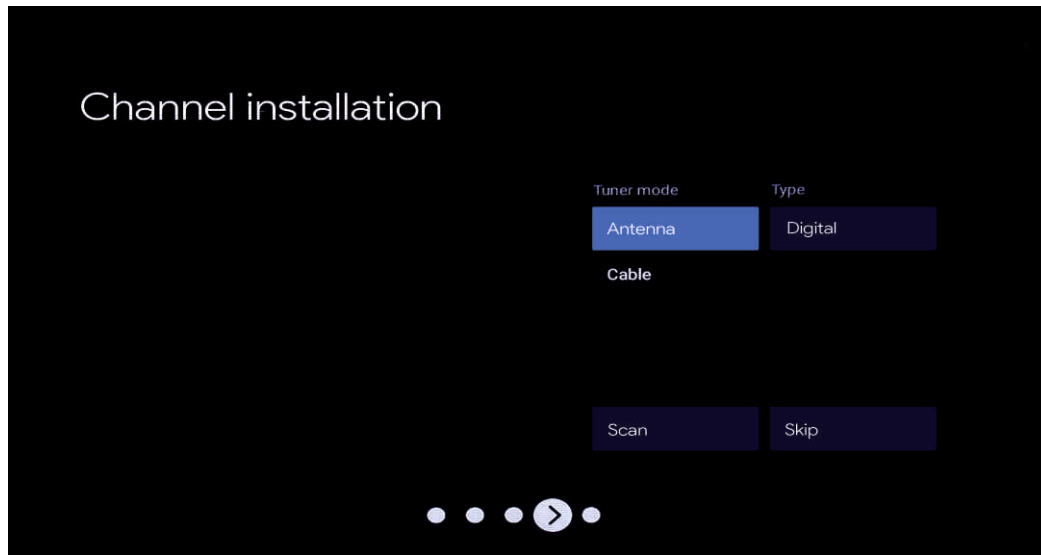  

Now you are ready for watching and enjoying of your Android TV

ANDROID TV - HOME SCREEN

 Once you have completed initial setup, you will now enter the ANDROID TV home screen.

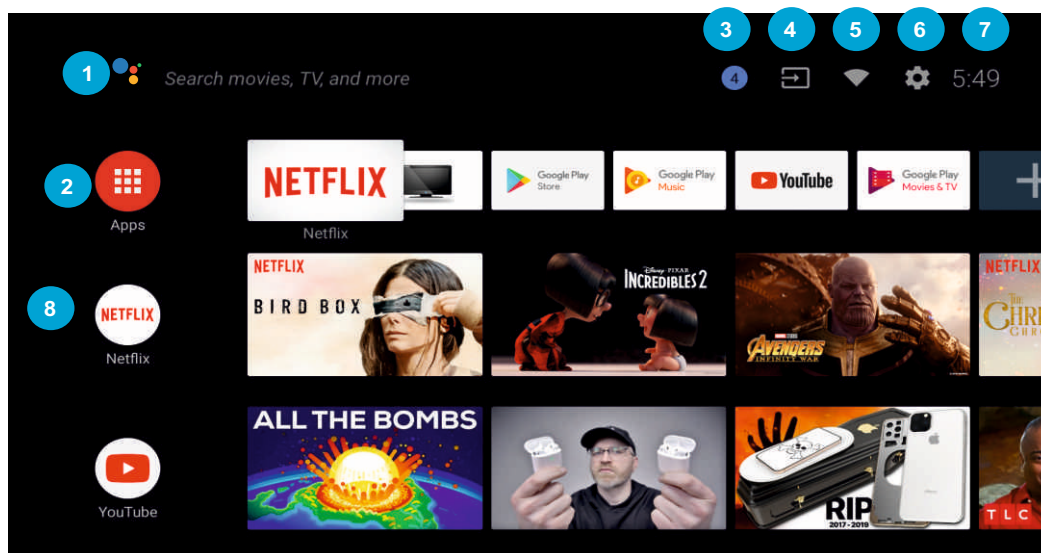

Note: This manual is for common use. Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. And for some models, certain options are not available. You can select all the features from homepage to display homepage.

1. Press to display homepage
2. press to select icons from the screen list.
3. Press **OK** to enter each option.
4. To exit the menu, press

Source: Select the input source from devices connected to TV through different ports.

Settings: Allows you to adjust TV settings.

Using Homepage-

Apps : press to select, press **OK** to Enter.

WARNING:

- Configure the network settings before using Smart TV applications.
- Slow responses and/or interruptions may occur, depending on your network conditions.
- If you experience a problem using an application, please contact the content provider.
- According to circumstances of the contents provider, an application's updates or the application itself may be discontinued.
- Depending on your country's regulations, some applications may have limited service or not be supported.
- Changes in application content may be made without prior notice by the service provider.

Using Homepage - TV

 
- 1 Open Google Assistant to start a voice search.
- 2 Selected the Multi-dot icon to have access to all your applications. e-installed applications available for you in this row, select "Google Play Store" if you wish to search and download additional apps optimized for Android TV.
- 3 NOTIFICATION: here will display all notification relating anything on your ANDROID TV.
- 4 INPUTS: Select this if you want to adjust your TV Input, Example: DTV, HDMI 1, HDMI 2.
- 5 NETWORK: This will display what network connectivity, Wi-Fi or ETHERNET.
- 6 SETTINGS: Select this if you want to access TV settings.
- 7 TIME: Displaying current time.
- 8 Each row past this point will display recommended content from the apps you already have installed.

Google Assistant

You can access Google Assistant from the home screen. Google provides some ideas about how you can get the most out of your Assistant here. You can also access the Google Assistant by pressing the Google Assistant button on your remote.

Apps

The apps screen shows the current Apps on the device and allows you to download more Apps by using the Google Play store. Please note: the below photo is an example showing some apps that have been downloaded from the App store, and your device will not have all of the apps below upon initial set up.

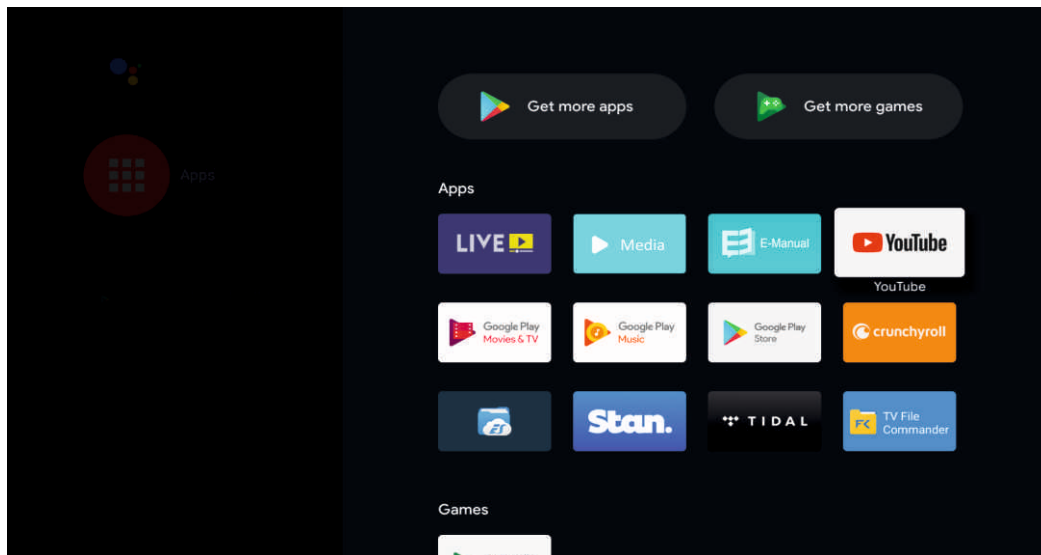


Notifications

Your notification for your TV will show up here. For example, if the device is not connected to WiFi, you will receive a notification prompting you to connect to your network. In this menu, you can read, action, and close notifications as necessary.


Inputs

 The inputs section provides access to all of the connected accessories and the inbuilt TV tuner. You can also access this menu by pressing the Source button on your remote.

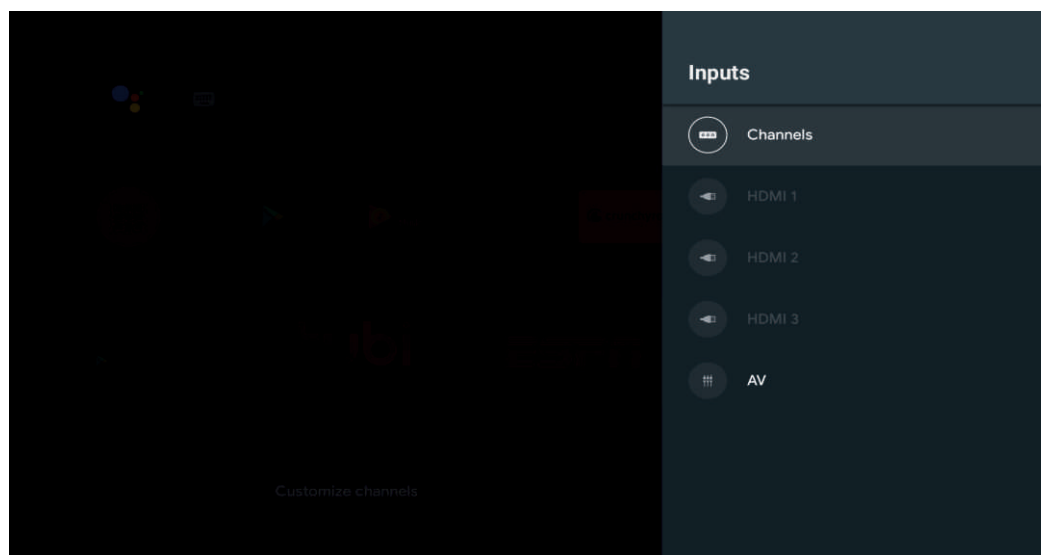


NETWORK & INTERNET

 To access NETWORK menu, select WIFI icon via the HOME screen or go into Settings menu and go down and select Network & Internet

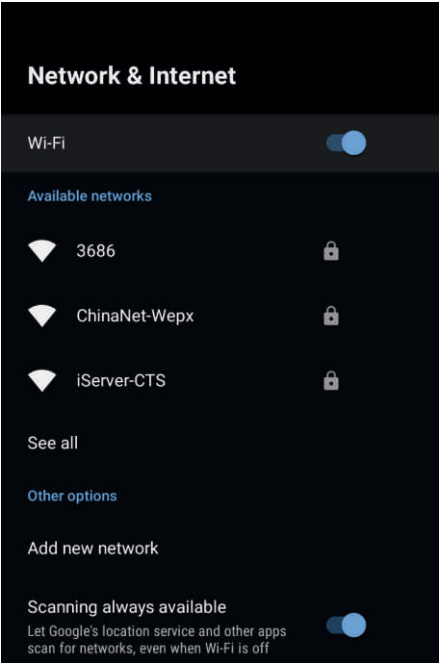


TIME

 To access ABOUT menu, select SETTING icon via the HOME screen. Then go down and select "ABOUT". To access DATE & TIME menu, select SETTING icon via the HOME screen. Then go down and select "DATE & TIME".

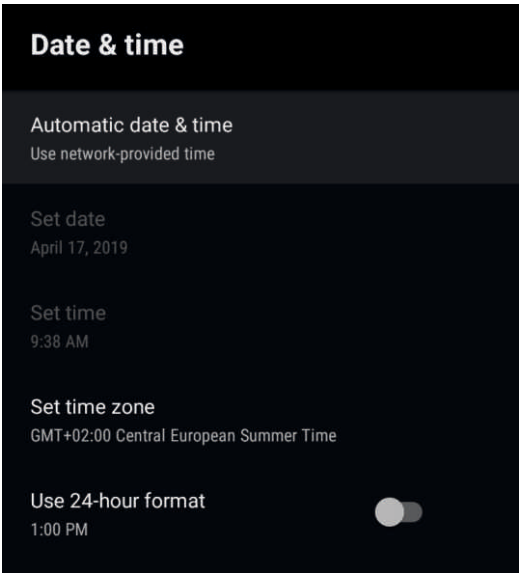

Settings

 Settings are located at the top right of the home screen:

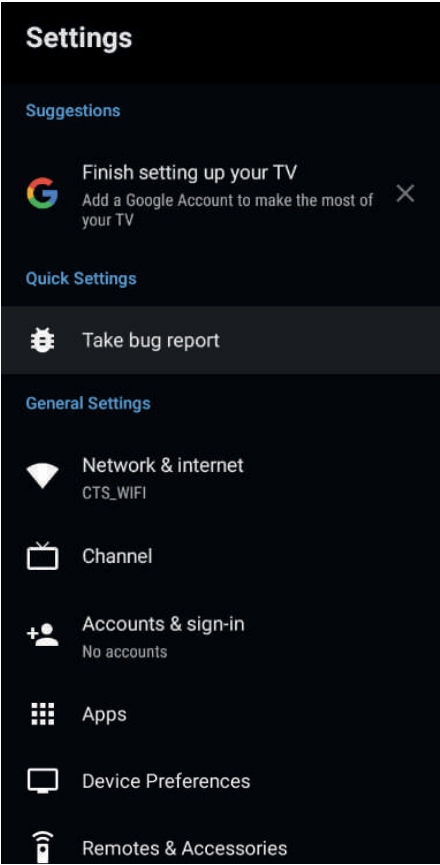


Accessing channels

▼ ▲ buttons can up or down to switching channel. or open virtual keyboard and select digital switching channel

Source

 Press SOURCE then press ▲/▼ to select your desired source, and then press OK to confirm.

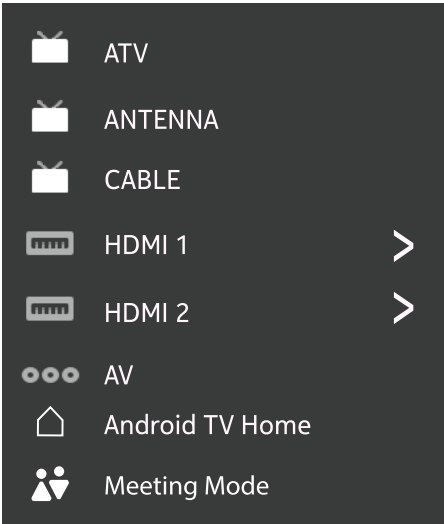

Note: The available source might differ depending on the model.

Volume

Volume control: press the Volume +/- buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.

Sound mute: press the Mute button to temporarily mute the sound. Press this button again or the **Volume +** button to restore the sound.

 
 
Using Quick Access Menu

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

This section explores the menus and settings of your TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

1. In TV mode, press  on the remote control to display the quick access list.
2. Press / to select the desired item, then press **OK** to open the corresponding submenu.
3. In submenu, use / and **OK** buttons to make the adjustments, or use / to select an item, use **OK** /  to enter and operate according to the on-screen display or guide.

Press  to return to the previous menu.

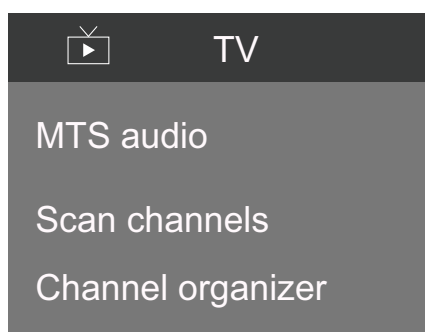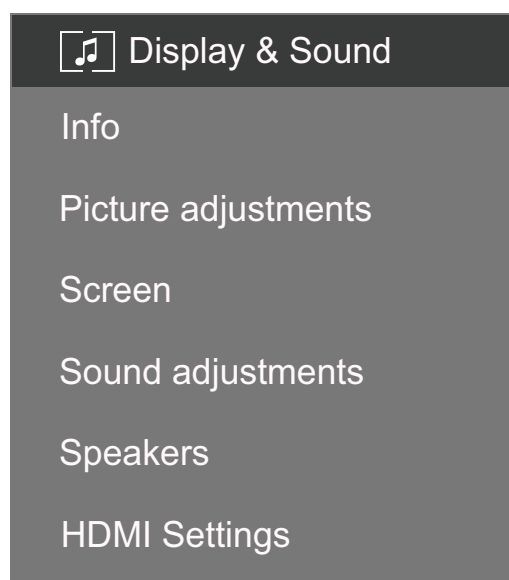

Display & Sound

Info: Select this option to view TV information.

Picture adjustments: Enter to adjust picture mode or Advanced settings.

Screen: Select this option to adjust the picture size.

Sound adjustments: Select this option to set the sound adjustments.

Speakers: To enter TV speaker settings.

HDMI Settings: Enter to set up HDMI devices for streamlined control.

MTS audio: Enter to check MTS audio.

Scan channels: To setup Analogue or Digital channels.

Channel organizer: Highlight the channels you want to Move, then press the right arrow key. You can use the arrow keys to move the channel. If you want to delete the highlighted channel, press **OK** key.

The Settings menu allows you to configure the TV with your preferences.

 
Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

This section explores the menus and settings of your TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

1. In TV mode, press  on the remote control to display the quick access list.
2. Press / to select the desired item, then press **OK** /  to open the corresponding submenu.
3. In submenu, use / and **OK** buttons to make the adjustments, or use / to select an item, use **OK** to enter and operate according to the on-screen display or guide.

Press  to return to the previous menu.

Channels Setup

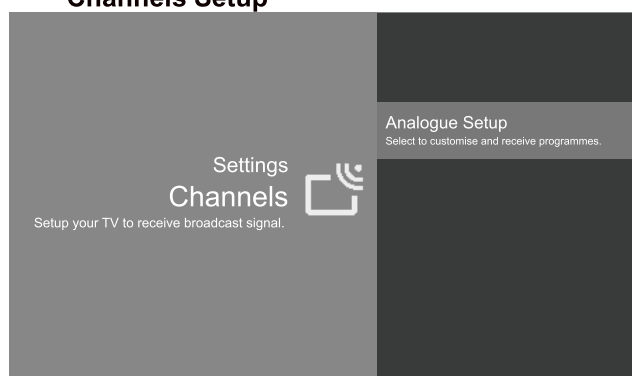


Analogue Setup

- **Analogue Auto Tuning:** Press **OK** to start the automatic search process. The search may take a few minutes. During the process, you can press **Back** to abort.

- **Analogue Manual Tuning:** Press **OK** to enter the interface. Press / to set program, TV system or color system item, then Press / select Frequency and press **OK** to search channel.

 - **Teletext Setup:** H Decoding page language :Press **OK** and then use / to select Decoding page language.

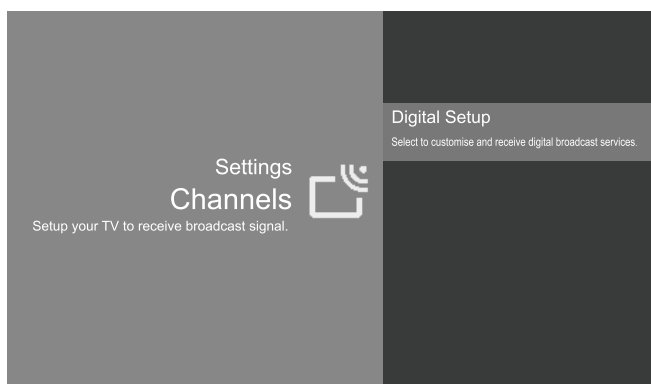

Digital Setup

- Digital Antenna Turning: Press OK to start the automatic search process. The search may take a few minutes. During the process, you can press and choose YES

Subtitle Setup:

(1) Subtitle Setting: include , Basic, Hearing impaired.

(2) Primary Preferred Language:

Press OK and then use ▲/▼ to select Primary Preferred Language.

(3) Secondary Preferred Language:

Press OK and then use ▲/▼ to select Secondary Preferred Language.

Teletext Setup:

(1) Preferred teletext:

Press OK and then use ▲/▼ to select Preferred teletext.

(2) Decoding page language:

Press OK and then use ▲/▼ to select Decoding page

Audio Setup

(1) Audio Description: include Off and On.

(2) Audio Description Mixing Level:

Press OK and then use ◀/▶ to set Audio Description Mixing Level.

(3) Audio Type: Include Normal ,Hearing Impaired.

 
(4) Primary Preferred Language:

Press OK and then use ▲/▼ to select Primary Preferred Language.

(5) Secondary Preferred Language:

Press OK and then use ▲/▼ to select Secondary Preferred Language.

External Input

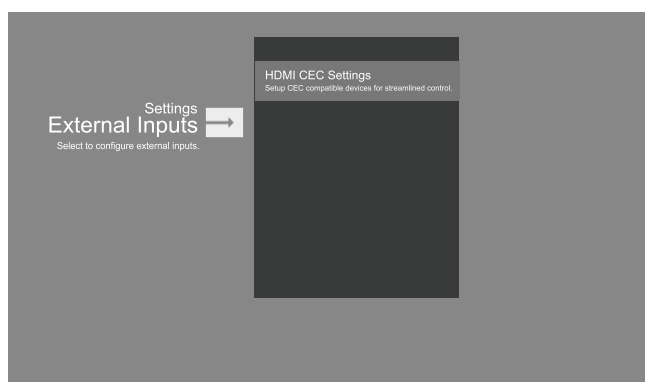


CEC Control: Select to turn CEC on or off.

Device auto power off: Power off HDMI devices with the TV.
Tv auto power On: Power on the TV with a connected HDMI device.

CEC device list: Turn devices on and select [Enable] to enable control of HDMI devices.

Device Control Keys: Pass through additional remote controls to CEC compatible devices.

Picture & Display

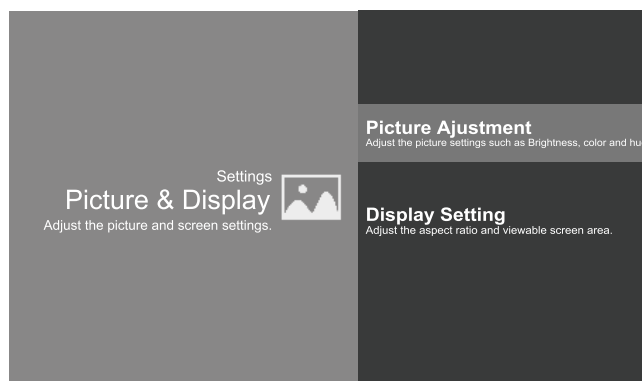 

Picture Adjustment:

- Picture Mode: Optimize picture quality for general content. Use ▲/▼ to scroll through the Picture preset settings: standard, Dynamic, Movie, Sport and Personal.

- Advanced Settings:

Access advanced picture enhancing options.

Brightness: Adjusts the brightness of the picture.

Color: Adjusts the color saturation.

Clarity: Advanced technique for picture enhancement.

 
Reset: To reset picture adjustment.

Display Setting:

- Screen mode: Adjust the picture size. Use ▲/▼ to scroll

the Screen mode preset settings.

- Auto screen: Automatically adjusts screen mode based on the signal. include On and Off.

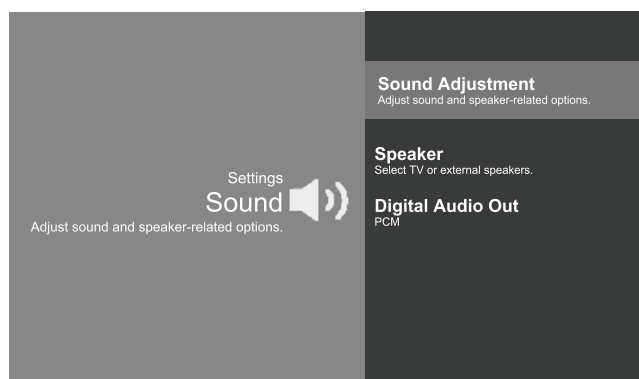

Sound Adjustment :Adjust sound and speaker-related options.

Sound Mode: Optimize sound quality for general content. Use ▲/▼ to scroll through the sound preset settings: Sports, standard, Movie, Music and News.

Surround: Reproduces life-like surround sound when playing 5.1 -channel audio sources. include On and Off.
 - Advanced Setting :Access a nced sound enhancing options.

Volume Setting:

- 1)Auto Volume: Keeps the volume level constant for all programs and inputs. include On and Off.
- 2)Balance: Adjust the speaker balance.
- 3)Digital Audio Out Volume: Applied for PCM only. The volume levels between PCM and compressed audio will differ.
- 4)Digital Audio Out Delay: Set the delay time or Digital Audio.

Sound mode related:

 
- 1)Surround to scroll through Surround effect.
- 2)Equalizer: AI V to scroll through Equalizer.

Reset: To reset all Sound adjustment settings.

Speaker: Switch sound output channel.

Digital Audio Out: Opti al out for audio signals from the Digital Audio Out.

System

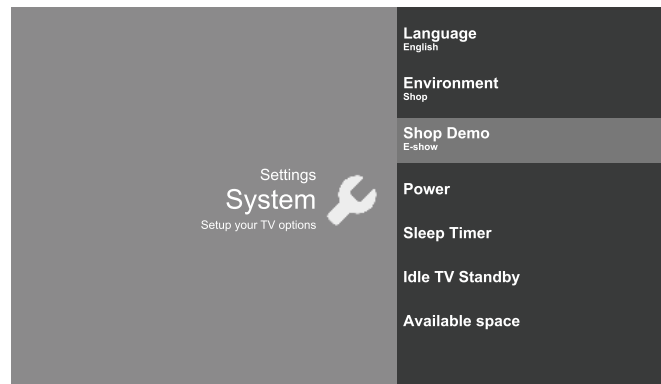

Language:

Use▲/▼to scroll through Language.

Environment:

Enter to set Home or shop mode.

-Home Mode:

You Would be able to view the standand settings or Picture and Sound Modes.

-Shop Mode:

You can enjoy enhanced setting or Picture and Sound Modes.

Note: Picture menu settings will not be accessible when ou select Shop Mode.

Shop Demo:

Enter to set E-show or E-stic er.

Note:E-stic er is not available for certain model.

Power:

Enter to set Power mode.

- Wake On Network:

Enable wake on WIFI Settings.

- Network standby:

Enable wake on Ethernet Settings.

Sleep Timer:

Set the TV to turn o ffautomaatally.

Idle TV Standby:

Select the inactivity time that TV enter standby.

Available space:

Show the system storage size and Memory size

Attention and Frequently Asked Questions

Attention: Some non-standard mobile storage device may not be recognized. Please change to use the standard device.

Note: For coding files, there are many kinds non- standard coding method, so this system can not be guaranteed to support the file formats using any coding method.

Frequently Asked Questions:

1. Under the following conditions, this system cannot decode the file and the file cannot be play normally: -The parameters of file such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system; The format of file is not matched or the file is harmed.

2. Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.

3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera.

If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.

4. The system supports standard USB1.0 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc..

 
 
5. For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.

6. When playing the video with high compression ratio, these phenomenon, such as picture standstill and menu long time response, are normal.

7. For some USB device with power supply, such as large size hard disk, MP4, etc., suggests using it with power to avoid electric power shortage.

Multimedia

Connect a USB device to a USB socket, the screen will show USB file name and then press OK to enter .if no USB device connected, the USB interface will be not displayed.

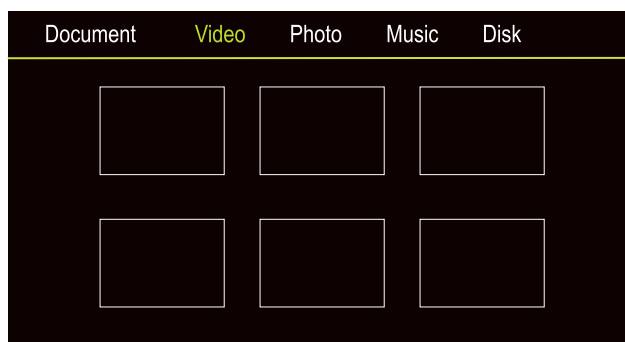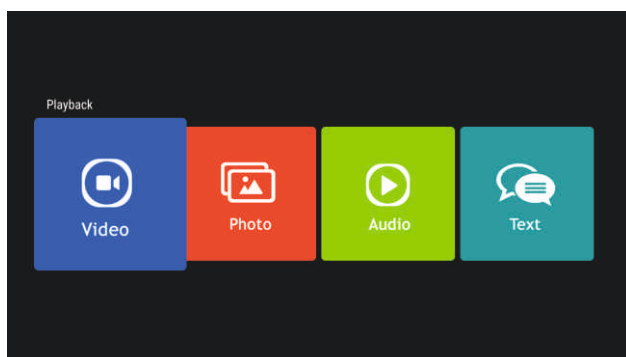

Document:

1. Select Document icon, then press OK button to choose folder.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. Press Return key of remote to Stop playing.

Video:

1. Select Video icon, then press OK button to view movie file.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. While showing picture, press OK to display the play console. For Previous and Next use remote left and Right key.
4. Use OK key or  key to see more option: Left to zoom in, Right to zoom out, Play Interval, Right to rotate, Manual play, Information, Play mode, BGM: on or off.

Music:

1. Select Music icon, then press OK button to listen to Music.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. The Play console includes Previous, Play/Pause, Fast backward/Fast forward, Next. Press  key to see Play List.
4. Press Return key of remote to Stop playing.

Disk:

1. Select Disk icon, then press OK button to choose folder.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. Press Return key of remote to Stop playing.

Problems & Solutions

Note: Problems & solutions 1 to 2 are for the TV models which have network functions, so users of non-connected TV models can disregard them.

1. Fail to link to the network.

- Check if your TV is connected with the network;
- Reboot your TV;
- Consult your internet service provider, to confirm if access of your router is supported. Refer to the operation manual of your router.

Make sure if your TV is connected with the router. If the router is well connected and powered on, try to change a new router and network line, and use your PC to have a test. Should your problem persists, try to consult Client Service Centre.

2. The video could not be played smoothly.

- Videos from your USB flash drive It may result from data transmission, or its code flow is far beyond the supported formats of this TV set.
- Videos downloaded from internet, or online videos.
 - a. It may be caused by the lower bandwidth of your network. A high network speed is required to handle online videos.
 - b. Peak internet usage times may affect the bandwidth.
 - c. Check if any other computers on the same network are also operating, as they may be using up bandwidth. Especially if they are downloading or displaying on-line videos.
 - d. The video may not be smooth itself, it is not the problem of your TV or network.

3. When two mobile hard disks are connected with the TV at the same time, they will not be recognized some time.

- All mobile hard disks consume a lot of power, which may result in power supply problems. We recommend inserting only one hard disk, or a low power consumption mobile hard disk

4. The video from a mobile hard disk (USB) is playing with no sound.

- The audio format of the video in your mobile hard disk is not supported by the TV player

5. Some videos fail to play.

- The formats of the videos may not be supported by the TV, especially videos shot by certain kinds of cameras, generally with their private protocol of formats, which are not compatible with our TV.

6. Video stops playing midway.

- Mistakes may occur when videos are copied or compressed, so they may automatically stop playing during playback.

7. What should I pay attention to, when I do SW updating

- No power cuts when SW updating;
- Avoid any operations with your remote control when SW updating; Be patient because the SW updating process may take a little bit longer time.

8. There are no distinct changes of TV interface after SW updating.

- Under certain conditions, SW updating may not only update or add new functions but also improve the performance of the TV set, without distinct changes of interface. Also, there may be no changes to the user interface at all.

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be

No picture, normal sound

- 1 Adjust the brightness and contrast
2. Broadcasting ailure may happen.

Remote control does not work

- 1.Change the batteries.
2. Batteries are not installed correctly

Normal picture, no sound

1. Press buton ► increase volume
2. Volume is set to mute, press the Mute buton to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area Of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception

1. Adjust the position and orientation of the in door/ out door antenna.
2. Check the connection Of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting ailure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flu erers or drifts. This is usuallaused by interference from cm car ignition system, neon lamps, electric drills, or Other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or Other objects. Changing the direction or position Of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture Find out and remove the radio interference source.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories License Corporation.



NETFLIX is registered trademark of NETFLIX, Inc



This Trademark Registration is applied by Z X GLOBAL FZ-LLC



Sony LIV is a registered trademark of Sony Corporation or its subsidiaries



is a registered trademark of Amazon Technologies, Inc.

Terms And Conditions Of The Warranty

- The Onida LCD /LED TV set is guaranteed against manufacturing defects Of parts & components for a period Of one year from the date Of purchase
- In the event Of any manufacturing defect during the warranty period, the defective part Will be replaced/repared by the Company free Of cost
- This Warranty is limited Within municipal limits.
- This warranty does not extend to any part Of the set Which has been damaged due to misuse, neglect, accident or improper installation, damages caused by pets or any external agents such as lightning, flooding, fire etc.
- Further this warranty shall cease to be operative in the event Of the set having been tampered With, serviced or repared by any agency not authorised by the Company.
- The company does not also cover loss or damage in transit whether carried by the Company's transport or by the purchaser.
- The Company Will not be liable for the dealer's expenses, if any, charged in carrying out the terms Of this warranty.
- The Company Will not be liable for any delay in rectifying the set, in the event Of non- availability Of spares.
- The Company Will also not be responsible for losses, direct or indirect , arising out Of the delay, if any.
- This warranty does not cover ghosting or fading effect, in the picture, caused by the situation Of the purchaser's residence, where the set is located.
- This warranty does not extend to accessories (including aerial), ,if any, supplied With this set. In the event the set requires attention at the Company's Service Station, the Company shall arrange the to and fro transportation during warranty period.
- If the purchaser desires to send this set for a general check up/repair to the Service Station, he will have to bear the to and fro cost.
- Maximum care is taken to ensure that the set and aerial are shockproof. However the Company will not be liable for any loss or damage cause to property, for death & disability cause to human life for any reason whatsoever.

This warranty is issued subject to jurisdiction of civil courts in Mumbai.

Warranty Is Null And Void, If

- The Service Centre copy Of warranty card is not dispatched Within 10 days Of the date Of purchase.
- The TV set is not purchased from the authorized dealer of the company. (Customers are requested to check the Dealers Authority Certificate).

Service Centre**ONIDA****MIRC ELECTRONICS LTD**

Onida House, G-1, MIDC, Mahakali Caves Road,
Andheri(E), Mumbai-400093

Tel No. 7490955555

Email: customer.care@onida.com

Customer's Warranty Card

THIS WARRANTY STANDS NULL AND VOID IF THE SERVICE CENTRE COPY OF
WARRANTY CARD IS NOT DESPATCHED WITHIN 10 DAYS OF DATE OF PURCHASE

Customer Name _____

Address _____

Name of the Town _____

Dealer's Name _____

Model No. _____ Chassis No. _____

Date of purchase _____

Date of Expiry of Warranty _____

I accept the terms & conditions of the warranty

Signature

Service Station Copy

Customer Name _____

Address _____

Name of the Town _____

Dealer's Name _____

Model No. _____ Chassis No. _____

Date of purchase _____

Date of Expiry of Warranty _____

I accept the terms & conditions of the warranty

Signature

 
Service center Number

Customer Care Number

7490955555

Timing-9 AM to 9PM

E-Mail:customer.care@onida.com

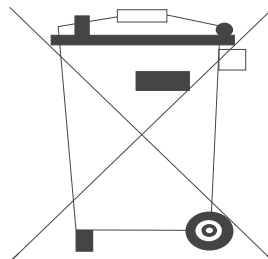

As per the Government of India's E -Waste Management Rule 2016, End of Life Products intended to be discarded should be channelized for dismantling and recycling through authorized dismantler and recycler only, to ensure environmentally sound management of E - Waste.

It cannot be disposed off with the general Household Waste so as to prevent any damage to the environment.

To facilitate return of End of Life product visit our website www.onida.com for details or contact nearest authorized Service Center.

We request you to support us in our endeavour to ensure an environment friendly nation.



Business Reply Card

SERVICE CENTRE



